

# TotalPass® P600



## QUICK START GUIDE



# 1

# UNPACK THE BOX

Thank you for choosing Icon Time, we appreciate your business.

Below are the contents included with your TotalPass P600 time clock. If anything is missing, please contact our support line for a replacement: 1-800-847-2232.



TotalPass P600  
Time Clock



Back View with  
Mounting Bracket



2 Screws



2 Keys



15 Proximity  
Badges



15' Ethernet Cable



15' USB Cable



Power Supply

***Please Note:*** The comprehensive User Guide can be downloaded from our website support page: <https://www.icontime.com/support/>

2

## REGISTER YOUR PRODUCT

Registering your product activates your 30 days of free setup support, which includes:

- **Unlimited telephone and email support**
- **Remote login assistance**
- **Troubleshooting**

Registering your product also ensures that you will be notified about software updates.

To register your product, please visit:

<https://www.icontime.com/registration/>

# 3

## MOUNT YOUR TIME CLOCK TO THE WALL

1. Determine your desired height for the clock.
2. Use the 2 wall mount screws provided and attach the bracket to the wall.
3. Insert the key and turn it clockwise a quarter of a turn.
4. Push the time clock onto the mounting bracket so that the tabs fit into the 3 matching slots on the back of the clock.
5. Slide the clock downward until the tabs click into place.
6. Use the key to lock the clock to the mounting bracket.
7. Remove the key.



# 4

## SET THE DATE AND TIME



TotalPass P600 Time Clock



Power Supply



Wall Outlet

1. Plug the power supply into the port located on the bottom of the clock.
2. Plug the power supply into a wall outlet.
3. The display will read: **Set Date/Time**.
4. Press **A** or **V** on the time clock to select the current month. Press **Enter**.
5. Follow the same procedure to advance through each step as prompted to complete the date and time setup. If you make a mistake, press **Clear** on the time clock to go back and correct the entry.
6. Once you've completed these steps, the time clock will display:  
**Date and Time Set**.

If the clock detects a Wi-Fi connection, the display will read:  
**Network Detected Press Enter**.

**5**

## CHOOSE YOUR CONNECTION OPTION



TotalPass P600 Time Clock

The TotalPass P600 time clock includes three connection options: Wi-Fi, Ethernet, or USB.

# 6

# CONNECT USING WI-FI

1. If your wireless network is detected automatically, press **Enter** and *go to Step 5.*

(If a wireless network is not immediately detected, please *go to Step 6.*)



2. Press **1** on the time clock to enter **Supervisor Mode.**
3. Enter the default security code: **00 00 00**.
4. Use the **A** on the time clock to scroll and go to **Network Settings.** Press **Enter.**
5. Go to **Wi-Fi Settings.** Press **Enter.**
6. Go to **View Networks.** Press **Enter.**
7. Select your Network from the list. Press **Enter.**
8. Enter your Network Password using the **V** on the time clock to scroll through your character options.



Wi-Fi Connection

Use the **2** key to change the character set to lowercase, uppercase, # or symbol.

Press **Enter** to accept a single character.

When you have entered your password, press **Enter twice** to save it.

**Note:** Write down the IP Address shown and go to the instructions for Logging Into Your Time Clock.

# 7

# CONNECT USING ETHERNET

## System Requirements

- Available network port on your router, modem, or switch.
1. Plug the Ethernet cable into the port located on the bottom of your clock.
  2. Connect the other end of the Ethernet cable into an available port on your router, switch, or wall port.
  3. Disconnect the power supply from the time clock and reconnect it again to power cycle the time clock.
  4. Check to see that the green and amber Ethernet link lights turn on where the Ethernet cable plugs into the clock. This verifies that your time clock is connected to your network.


If the lights do not turn on, check the cable connections.

**Note:** A network connection is not required at all times. A Network connection is required for accessing the time clock application and running reports.

5. Press **🔒** on the time clock to enter Supervisor Mode.
6. Enter the default security code: **00 00 00**.
7. Press **▲** to scroll and find the **View IP Address** option. Press **Enter**.
8. Write down the clock's assigned IP address below for reference.

IP Address: \_\_\_\_\_



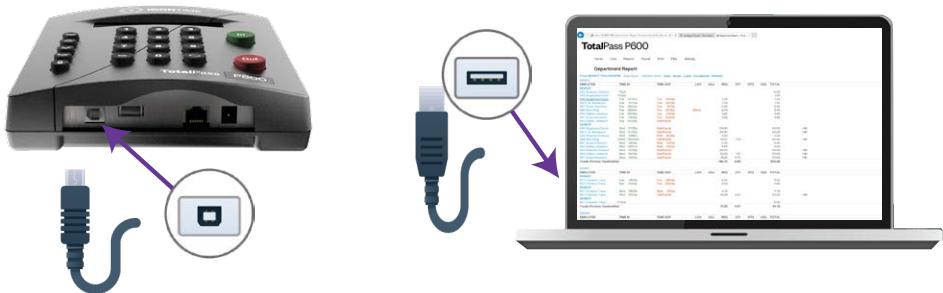

### System Requirements:

- Windows PC (Vista or above)
- An available USB Port on the PC


1. Plug the USB cable into the USB port located on the bottom of your clock.
2. Plug the other end of the USB cable into the USB port on your PC.
3. Download the **USB Communication Drivers** from our website and follow the directions for installation provided on the webpage.
4. After installing the drivers, open your Web browser and navigate to:  
<http://totalpass.timeclock> or <http://172.20.20.1>

**Important:** USB connection is compatible with Windows Vista and above. If you are using a Mac, give us a call for alternative options.

## 9

## LOG INTO YOUR TIME CLOCK

1. Open your computer's web browser and enter the clock's IP address in the address bar. Press **Enter**.
2. Set your **Password**.
  - Enter your **New Password** (default Username is **admin**)
  - Confirm your **New Password**

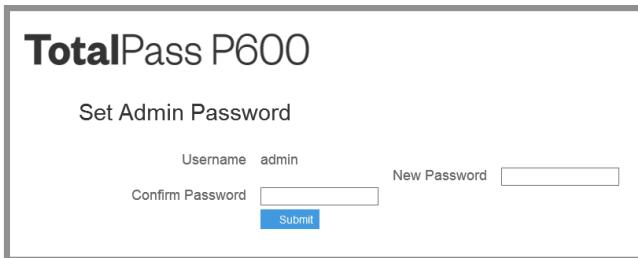

The screenshot shows a web-based configuration interface for the TotalPass P600. The title 'TotalPass P600' is at the top. Below it, the heading 'Set Admin Password' is displayed. There are three input fields: 'Username' with the value 'admin', 'Confirm Password' with an empty input field, and 'New Password' with an empty input field. A blue 'Submit' button is located below the 'Confirm Password' field.

Username	admin
Confirm Password	<input type="password"/>
New Password	<input type="password"/>

**Submit**

3. For instructions on adding employees and completing setup, click the **Help** menu on the navigation bar and download the **User Guide**.

**PAYROLL PREFERENCES**

Pay Period Type

Last Pay Start

This Pay Start

Next Pay Start

Day Start

Week Start

EMPLOYEE LIST					
	<input type="button" value="Select All"/>	<input type="button" value="Select None"/>	<input type="button" value="Show Inactive"/>		
Active	Display ID	Last Name	First Name	M.I.	Web Punch
<input type="checkbox"/>	043	Employee 043			
<input type="checkbox"/>	047	Employee 047			
<input type="checkbox"/>	063	Employee 063			
<input type="checkbox"/>	110	Employee 110			
<input type="checkbox"/>	155	Employee 155			
<input type="checkbox"/>	180	Employee 180			
<input type="checkbox"/>	190	Employee 190			
<input type="checkbox"/>	207	Employee 207			
<input type="checkbox"/>	261	Employee 261			
<input type="checkbox"/>	263	Employee 263			

### Set Up Your Pay Period:

1. Go to the **Settings** menu, and click **Preferences**.
2. Under the **Pay** tab, select the applicable **Pay Period** type. Complete the rest of the settings accordingly.

### Add Employees:

The **Employee List** is used for maintaining employees in the time clock including, adding, editing and terminating employees.

Each employee is assigned a default 4-digit PIN.

1. To access the **Employee List**, go to **Lists**, then click **Employees**.
2. Assign **Employees** a **Personal Identification Number** (PIN)

**Free assistance is available for the first 30 days on new purchases and includes:**

- Unlimited telephone and email support
- Remote login assistance and troubleshooting

For Assistance, please call: 1-800-847-2232 #2, Mon-Fri, 5:00 AM to 5:00 PM PT

To submit an online request: <https://www.icontime.com/contact-support/>

***Product registration is required for our free 30-day assistance.***

**We also offer extended support contracts which include:**

- Annual Hardware Maintenance (Time Clock Insurance)
- Annual Upgrade to the Latest Software Version
- Annual Software Maintenance
- Unlimited Telephone and Email Support
- Remote Login Assistance and Troubleshooting

For instructions on clocking in and out, please refer to the enclosed

**[Quick Reference Sheet >](#)**

For instructions on setting up and using proximity badges, please refer to the

**[User Guide >](#)**

**[Quick Start Guide >](#)**