

IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY

WARNING —

1. Use close supervision when the appliance is used by, on, or near children or individuals with certain disabilities.
2. Use appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer.
3. When cleaning, use cold or warm water. Do not use hot water, seawater or cleaners as they can cause damage to the waterproof seals.
4. Do not leave the entire unit submerged in water for a long period of time.
5. Do not use the appliance with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly.

SAVE THESE INSTRUCTIONS TROUBLESHOOTING

There are several things to look for if your trimmer fails to operate:

1. Be sure the trimmer is turned on.
2. Make sure that the battery is properly placed in the battery compartment. Test the battery to be sure it is working.


3. Check the blades to see if they are clogged with hair clippings; if so, use a cleaning brush to remove hair.
4. If the trimmer still fails to operate, send it to the Conair Service Center (see Warranty).

OPERATING INSTRUCTIONS

1. To insert battery, twist the battery cover to the left to unlock the battery cover. Remove compartment cover by then pulling straight down (Fig. 1).

2. Insert 1 AAA alkaline battery, positive terminal downward. (If you are not going to use the device for long periods of time or if the battery is dead, remove the battery from the device. This will increase the battery's life.)

3. After inserting the battery, align the arrow with the "I" on battery cover then turn clockwise to align with the "O" (Fig. 2).

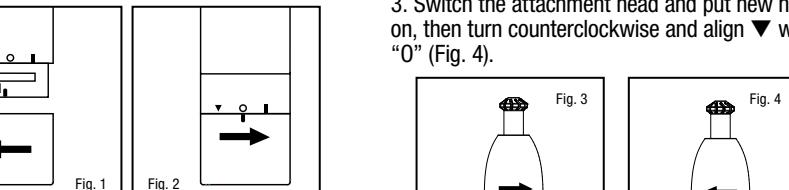

4. Always purchase the correct size and grade of battery most suitable for the intended use.

5. Clean the battery contacts and also those of the device prior to battery installation.

6. Ensure the batteries are installed correctly with regard to polarity (+ and -).
7. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.

8. This appliance is not a toy. Keep away from children.

INSTRUCTIONS FOR USE

1. Twist the battery cover counterclockwise to unlock battery cover.

2. Insert 1 AAA battery according to the polarity marking, return the battery cover, turn to the right and align with "I" and "O" marks to lock, and then twist clockwise again. The unit will start to work when the "I" marks are aligned.


3. After use, turn off the power by aligning the "I" mark on the battery cover with the "O" mark (Fig. 1).

GETTING STARTED TO SWITCH TRIMMER HEADS

1. Make sure the unit is turned off.

2. Turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 3).

3. Switch the attachment head and put new head on, then turn counterclockwise and align ▼ with "O" (Fig. 4).

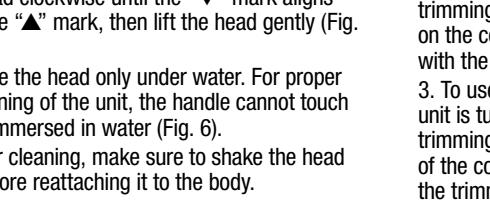

4. Always purchase the correct size and grade of battery most suitable for the intended use.

5. Clean the battery contacts and also those of the device prior to battery installation.

6. Ensure the batteries are installed correctly with regard to polarity (+ and -).
7. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.

TO TRIM NOSE/EAR HAIR

Use the 3-bevel cutting head for nose and ears. Gently insert the cutting head into the nostril or ear and move it slightly back and forth to cut the hair.

NOTE: To trim nose hair, insert trimmer no deeper than $\frac{1}{4}$ " at entry of nostrils and start trimming the lower hairs until no longer visible. To trim ear hair, guide the trimmer around the outer surface of the ear.

WET/DRY FEATURE

This device is water resistant. It may be exposed to splashing water in the shower, and can be rinsed clean under the faucet, but should never be completely submerged in water.

TAKING CARE OF YOUR NOSE/EAR TRIMMER

BLADE CARE

1. Brush away any loose hair that collects in the blades.
2. Store trimmer in a safe location.
3. Only use Conair® blades with this trimmer.

CLEANING YOUR NOSE/EAR TRIMMER


Make sure trimmer is off.

1. To remove the trimmer head for cleaning, turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 5).

2. Rinse the head only under water. For proper functioning of the unit, the handle cannot touch or be immersed in water (Fig. 6).

3. After cleaning, make sure to shake the head dry before reattaching it to the body.

4. To reattach the head onto the body, align the "▼" mark on the head with the "▲" mark on the body and then turn counterclockwise until the "▼" aligns with the "O" mark on the body (Fig. 7).

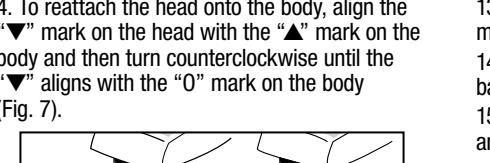

TO TRIM FACE & BROWS

1. This trimming attachment comes with dual trimming blades. The larger blade is ideal for trimming eyebrows and can also be used to trim unwanted body hair. The smaller blade is ideal for detailing. The double-sided comb attachment helps you achieve an even cut when you do not want to completely remove the hair.

BLADE CARE

Both sides work well for eyebrow trimming, the long tooth is best for body trimming and the short tooth is best for detailing.

2. It also comes with a comb attachment that helps you achieve an even cut when you do not want to completely remove the hair. The comb attachment has two sides: The long tooth is for body hair, and the short tooth is for eyebrow trimming.

Aligning the indicator with the L mark on the comb leaves hair longer, while aligning with the S mark leaves hair shorter (see Fig. 8).

3. To use the comb attachment, be sure the unit is turned off and slide the comb over the trimming blades (Fig. 9).

Make sure that the teeth of the comb are facing in the same direction as the trimming blade, and that the top of the comb is even with the top of the trimmer.

4. After cleaning, make sure to shake the head dry before reattaching it to the body.

5. If you want to completely remove hair, use the trimmer without the comb attachment.

TO TRIM FACE & BROWS

BLADE CARE

CLEANING YOUR FACE & BROW TRIMMER

BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

CLEANING YOUR FACE & BROW TRIMMER

Make sure trimmer is off.

1. Turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 5).

2. Rinse head under water (Fig. 10).

3. After cleaning, make sure to shake the head dry before reattaching it to the body.

TO TRIM FACE & BROWS

BLADE CARE

CLEANING YOUR FACE & BROW TRIMMER

BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

CLEANING YOUR FACE & BROW TRIMMER

Make sure trimmer is off.

1. Turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 5).

2. Rinse head under water (Fig. 10).

3. After cleaning, make sure to shake the head dry before reattaching it to the body.

4. To reattach the head onto the body, align the "▼" mark on the head with the "▲" mark on the body and then turn counterclockwise until the "▼" aligns with the "O" mark on the body (Fig. 7).

TRIMMER FEATURES

BLADE CARE

CLEANING YOUR FACE & BROW TRIMMER

BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

CLEANING YOUR FACE & BROW TRIMMER

Make sure trimmer is off.

1. Turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 5).

2. Rinse head under water (Fig. 10).

3. After cleaning, make sure to shake the head dry before reattaching it to the body.

4. To reattach the head onto the body, align the "▼" mark on the head with the "▲" mark on the body and then turn counterclockwise until the "▼" aligns with the "O" mark on the body (Fig. 7).

TRIMMER FEATURES

BLADE CARE

CLEANING YOUR FACE & BROW TRIMMER

BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

CLEANING YOUR FACE & BROW TRIMMER

Make sure trimmer is off.

1. Turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 5).

2. Rinse head under water (Fig. 10).

3. After cleaning, make sure to shake the head dry before reattaching it to the body.

4. To reattach the head onto the body, align the "▼" mark on the head with the "▲" mark on the body and then turn counterclockwise until the "▼" aligns with the "O" mark on the body (Fig. 7).

TRIMMER FEATURES

BLADE CARE

CLEANING YOUR FACE & BROW TRIMMER

BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

CLEANING YOUR FACE & BROW TRIMMER

Make sure trimmer is off.

1. Turn the head clockwise until the "▼" mark aligns with the "▲" mark, then lift the head gently (Fig. 5).

2. Rinse head under water (Fig. 10).

3. After cleaning, make sure to shake the head dry before reattaching it to the body.

4. To reattach the head onto the body, align the "▼" mark on the head with the "▲" mark on the body and then turn counterclockwise until the "▼" aligns with the "O" mark on the body (Fig. 7).

TRIMMER FEATURES

BLADE CARE

CLEANING YOUR FACE & BROW TRIMMER

###

MEDIDAS DE SEGURIDAD IMPORTANTES LEA TODAS LAS INSTRUCCIONES ANTES DEL USO PARA USO DOMÉSTICO SOLAMENTE


ADVERTENCIA —

- Supervise el uso de este aparato con cuidado cuando sea usado por, en o cerca de niños o personas con ciertas discapacidades.
- Use este producto solo para el uso previsto y como se describe en este manual. Solo use accesorios recomendados por el fabricante.
- Limpie el cabezal en agua fría o tibia solamente. No use agua caliente, agua salina o limpiadores ya que esto puede dañar los sellos de impermeabilidad del cabezal.
- No sumerja el aparato en agua por un tiempo prolongado.
- Para evitar las lesiones, no use este aparato con guías o cuchillas rotas o dañadas, o si les faltan dientes a las cuchillas. Compruebe que las cuchillas están debidamente alineadas antes de usarlo.

GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES DE OPERACIÓN

- Para instalar la pila, gire la tapa del compartimiento de la pila en sentido antihorario para abrir este. Retire el compartimento tirando hacia abajo (Fig. 1).
- Inserte una pila AAA, de acuerdo con los signos de polaridad (+/-) indicados en el compartimiento. Vuelva a colocar la tapa del compartimiento de la pila, y gírela en sentido horario hasta que las marcas "I" y "O" queden alineadas. A continuación, gire en sentido horario otra vez para bloquear. Una vez alineadas las dos marcas "I", el aparato se encenderá.
- Después del uso, apague el aparato alineando la marca "I" en la tapa del compartimiento y gire en sentido horario hasta que la flecha y la marca "O" queden alineadas (Fig. 2).

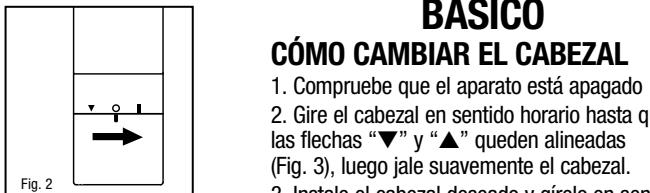

4. No use pilas que no sean del tamaño ni de la potencia indicados para uso con este aparato.

INSTRUCCIONES DE USO

- Gire la tapa del compartimiento de la pila en sentido antihorario para abrir este.
- Inserte una pila AAA, de acuerdo con los signos de polaridad (+/-) indicados en el compartimiento. Vuelva a colocar la tapa del compartimiento de la pila, y gírela en sentido horario hasta que las marcas "I" y "O" queden alineadas. A continuación, gire en sentido horario otra vez para bloquear. Una vez alineadas las dos marcas "I", el aparato se encenderá.


USO EN SECO/MOJADO

Este aparato es resistente al agua. Esto significa que puede ser expuesto a salpicaduras de agua en la ducha y que puede ser enjuagado en agua corriente, pero nunca debe ser sumergido completamente en agua.

FUNCIONAMIENTO BÁSICO

CÓMO CAMBIAR EL CABEZAL

- Compruebe que el aparato está apagado.
- Gire el cabezal en sentido horario hasta que las flechas "▼" y "▲" queden alineadas (Fig. 3), luego jale suavemente el cabezal.
- Instale el cabezal deseado y gírelo en sentido antihorario hasta que las marcas "▼" y "○" queden alineadas (Fig. 4).

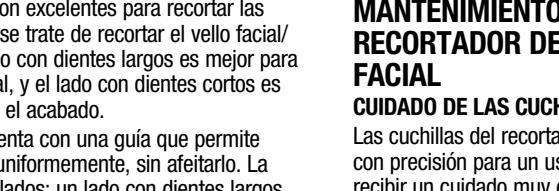

CÓMO CORTAR EL PELO EN LA NARIZ/LAS OREJAS

Para acortar el pelo en la nariz y las orejas, use el cabezal de corte biselado de 3 niveles. Inserte suavemente la punta del cabezal en la nariz o la oreja, y muévalo ligeramente de un lado para otro para cortar el pelo.

NOTA: Para recortar el pelo en la nariz, introduzca el recortador no más de $\frac{1}{4}$ in (0.5 cm) en el orificio nasal, y corte el pelo de abajo hasta que ya no sea visible. Para recortar el pelo en la oreja, guíe el recortador alrededor de la superficie externa de la oreja.

LIMPIEZA DEL RECORTADOR DE CEJAS/VELLO FACIAL

Compruebe que el aparato está apagado. 1. Gire el cabezal en sentido horario hasta que las flechas "▼" y "▲" queden alineadas (Fig. 5), luego jale suavemente el cabezal.

2. Enjuague el cabezal en agua (Fig. 6). No permita que la carcasa del aparato tenga contacto con agua.

3. Despues de limpiar el cabezal, sacúdalo para secarlo y vuelva a instalarlo.

4. Vuelva a instalar el cabezal, alineando las flechas "▼" y "▲", luego gire el cabezal en sentido antihorario hasta que la flecha "▼" y la marca "O" queden alineadas (Fig. 7).

CÓMO RECORTAR LAS CEJAS Y EL VELLO FACIAL

El aparato cuenta con un aditamento de dos cuchillas que permite recortar el vello facial/corporal y las cejas fácilmente. La cuchilla grande es ideal para acortar las cejas; también puede usarse para recortar el vello facial. La cuchilla pequeña es ideal para dar el acabado. La guía de dos lados para las cejas permite acortar las cejas uniformemente, sin afeitarlas.

MANTENIMIENTO DEL RECORTADOR DE NARIZ/OREJAS

CUIDADO DE LAS CUCHILLAS

1. Limpie las cuchillas después de cada uso, usando el cepillo de limpieza provisto.

2. Guarde el aparato en un lugar seguro.

3. Use solamente cuchillas Conair® con este aparato.

Fig. 3

Fig. 4

Fig. 5

Fig. 6

Fig. 7

Fig. 8

Fig. 9

Fig. 10

LIMPIEZA DEL RECORTADOR DE NARIZ/OREJAS

Compruebe que el aparato está apagado.

1. Para quitar el cabezal, gírelo en sentido horario hasta que las flechas "▼" y "▲" queden alineadas (Fig. 5), luego jale suavemente el cabezal.

2. Guarde las pilas nuevas en su paquete original, lejos de objetos metálicos, los cuales pueden provocar un cortocircuito. Nunca cortocircuite las pilas.

3. Revise las cuchillas; de ser necesario, límpielas, usando el cepillo de limpieza provisto.

4. Si esto es el problema, devuelva el aparato a un centro de servicio autorizado (véase la sección "Garantía").

INFORMACIÓN DE SEGURIDAD ACERCA DE LAS PILAS

Compruebe que el aparato está apagado.


1. Para quitar el cabezal, gírelo en sentido horario hasta que las flechas "▼" y "▲" queden alineadas (Fig. 5), luego jale suavemente el cabezal.

2. Guarde las pilas nuevas en su paquete original, lejos de objetos metálicos, los cuales pueden provocar un cortocircuito. Nunca cortocircuite las pilas.

3. Revise las cuchillas; de ser necesario, límpielas, usando el cepillo de limpieza provisto.

4. Si esto es el problema, devuelva el aparato a un centro de servicio autorizado (véase la sección "Garantía").

CARACTERÍSTICAS DE SU RECORTADOR

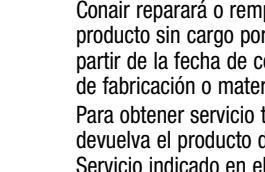

GARANTÍA LIMITADA DE DOS AÑOS (VÁLIDA EN LOS EE. UU. Y EN CANADÁ SOLAMENTE)

Este producto requiere 1 pila AAA.

1. Guarde las pilas en un lugar fresco y seco, ya que son sensibles a las altas temperaturas.

2. También cuenta con una guía que permite cortar el vello uniformemente, sin afeitarlo. La guía tiene dos lados: un lado con dientes largos, ideal para cortar el vello corporal, y un lado con dientes cortos, ideal para cortar las cejas. Alinear el indicador con la marca "L" deja el vello más largo; alinear con la marca "S" deja el vello más corto (Fig. 8).

3. Despues de limpiar el cabezal, sacúdalo para secarlo y vuelva a instalarlo.

4. Retire la pila del aparato cuando no lo va a usar por un largo período de tiempo (p. ej., meses).

5. No intente recargar pilas no recargables.

6. Use solamente el cable provisto con el aparato.

7. Cerciórese de instalar las pilas de acuerdo con signos de polaridad (+/-) indicados en el compartimento de las pilas.

8. Antes de instalar la guía, compruebe que el aparato está apagado y deslice la guía por encima de las cuchillas (Fig. 9). Compruebe que los dientes de la guía están en la misma dirección que los dientes de la cuchilla y que la parte superior de la guía está pareja con la parte superior del recortador.

9. Reemplace todas las pilas al mismo tiempo. No junte pilas nuevas con pilas usadas/gastadas.

10. Nunca tire pilas al fuego.

11. Apague el aparato después del uso.

12. Mantenga las pilas fuera del alcance de los niños de los niños, especialmente las que son lo suficientemente pequeñas como para ser ingeridas.

13. En caso de ingestión de una pila, busque atención médica inmediata.

14. Nunca abra, aplaste, perfore ni desarme pilas.

15. Deseche las pilas de acuerdo con las regulaciones estatales y locales.

Manual de instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso.

ELIMINACIÓN DE LA PILA

La pila AAA usada por este aparato no contiene materiales peligrosos y no requiere ser reciclada.

Puede eliminarse de forma segura con los residuos domésticos normales.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

©2022 CONAIR LLC

Centro de servicio

Conair LLC

Service Department

7475 North Glen Harbor Blvd.

Glendale, AZ 85307

IB-17494

Modelo NPGBT01

CONAIR®

girlbomb™
power in your palm™

FACE FORWARD™
Recortador de nariz,
cejas y vello facial