


POPUP-SHADE® SETUP


1 OPEN THE FRAME

- Lift and expand frame to arms length

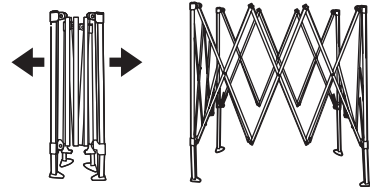


2 ATTACH THE TOP

- Unfold and position top over the frame
- Align and attach the four Velcro corners

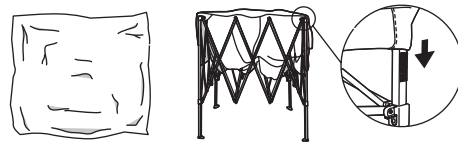


3 SETTING THE POPLOCK®

- Lift the frame assembly and position yourself underneath. Expand the frame fully by pushing the PopLock® central hub straight up until it clicks
- Finish setup by attaching upper and lower Velcro loops

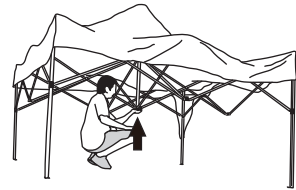

4 EXTENDING THE LEGS

- Step on the footplate and extend each leg until securely locked
- Press the red button on each leg to further extend the height

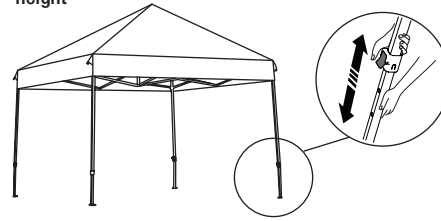

5 ANCHORING THE FRAME

- Insert included stakes into each footplate, tie corner guy-wire ropes
- Angle and tension each guy-wire rope to the included tent spikes



WARNING




KEEP ALL FLAME AND HEAT SOURCES AWAY FROM SHADE FABRIC
ENSURE THE SHADE IS PROPERLY ANCHORED AT ALL TIMES
TAKEDOWN IN WIND OR ANY APPROACHING INCLEMENT WEATHER

TILT-N-GO COVER™


1

- Slip the cover over the closed frame so the lower red webbing plugs align with the red labeled footplate wheels.

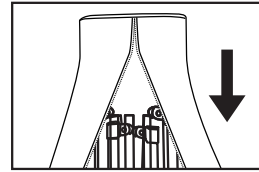


2

- Ensure the lower webbing connector plugs are aligned correctly and zip the cover closed.

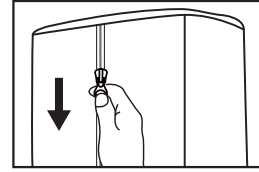


3

- Buckle the lower webbing harness strap and securely insert the two red hanging strap plugs into the wheeled footplate.

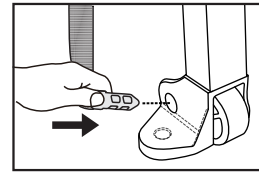

4


- Tilt and roll using the end handle.

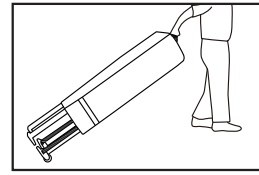

POPUPSHADE® TAKEDOWN


1 REMOVE STAKES AND RETRACT LEGS

- Press the red button on each leg to retract

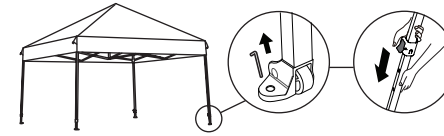


2 RELEASE THE POPLOCK® CENTRAL HUB

- Position yourself under the frame and press red button to release the central hub

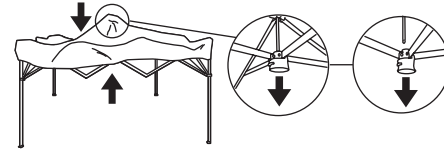


3 FOLDING THE FRAME

- Lift one corner and push inward until closed

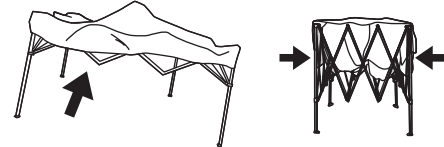

SPARE PARTS

To inquire about replacement parts, please call 720-222-2523, Monday - Friday, 9:00 AM - 4:00 PM CST; or email to care@popupshade.com

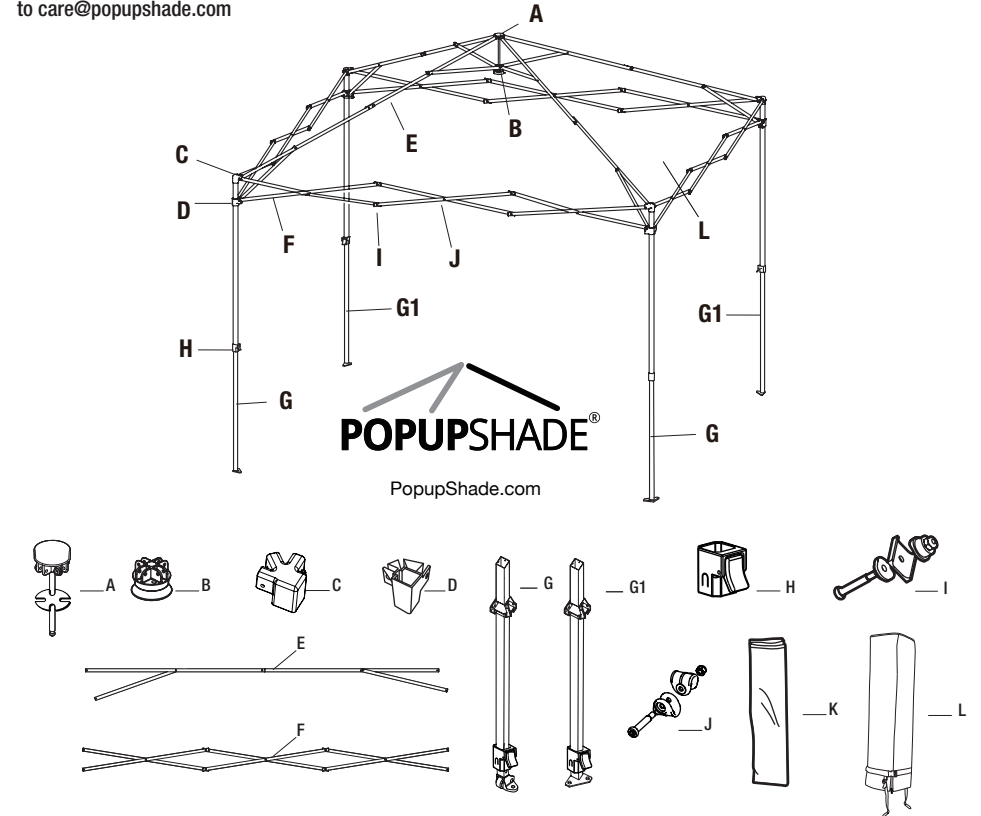

Part	Description	Reference No.
A	Central Pole	UNCP82BKCL
B	Central Bottom Hub	UNCHO0BKCL
C	Leg Cap	UNLC11BKMI
D	Slider	UNLS11BKMI
E	Ceiling Assembly	UNEA10GY00
F	Eave Assembly	UNLA10GYPB
G	Leg Assembly-With wheel	UNLA10GYWW

Part	Description	Reference No.
G1	Leg Leg Assembly-No wheel	UNLA10GYNW
H	Leg Extend	UNLE11BK4P
I	M5 Bolt Kit	UNBKM5BK4P
J	M4 Bolt Kit	UNBKM4BK3P
K	Top Fabric-blue	UCT110BU00
L	TILT-N-GO COVER™	UCCB86BK00