

 
REALTOUCH MASSAGE

WIRELESS NECK AND BACK
SHIATSU WITH HEAT


CONGRATULATIONS ON YOUR PURCHASE OF THE REALTOUCH MASSAGE.

Please read all instructions and warnings prior to use. Keep this sheet as it contains important information for future reference.

CONTENTS

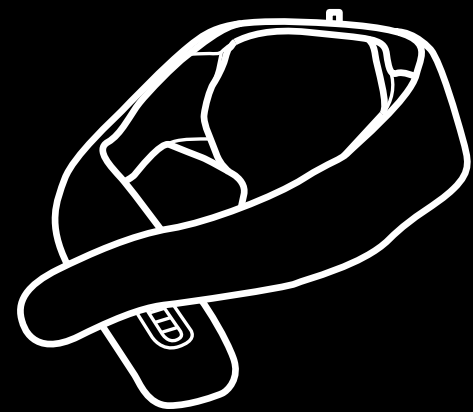


REALTOUCH MASSAGE

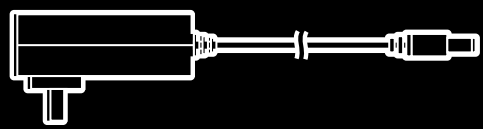 

POWER ADAPTER

 GETTING STARTED

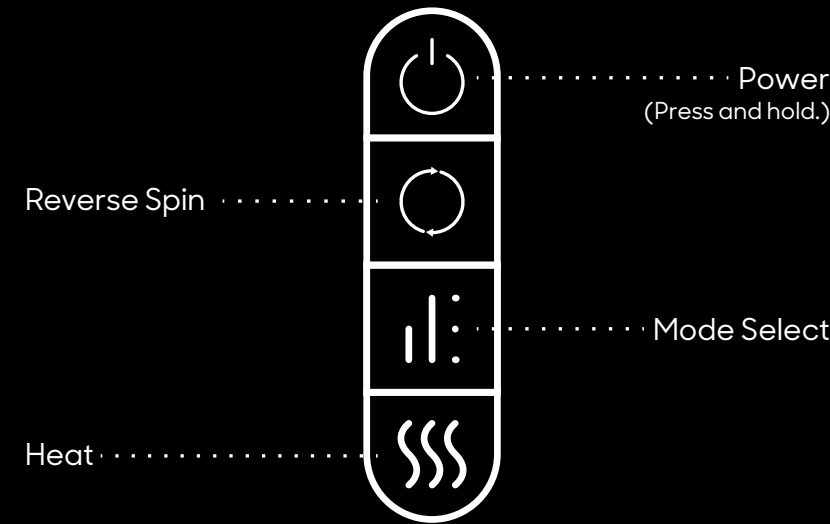

1. Plug the power adapter into the massager and then into a wall outlet. Allow to fully charge before use.
2. Put on the massager and then press and hold the Power button.
3. Press the Mode Select button to toggle through the massage modes.
4. Press the Reverse Spin button to reverse the massage direction.
5. Press the Heat button to add warmth.
6. Use for up to 15 minutes at a time and enjoy your massage!

 
FEATURES

- Shiatsu massage for sore or tense muscles
- Dual massage heads with 4 nodes each
- Optional heating for soothing warmth
- Adjustable pressure with arm straps
- Spin reverse at the touch of a button


CARE INSTRUCTIONS

- Spot clean only. Unplug and wipe with a damp cloth.
- Air-dry only. Never place in a dryer.
- Allow to dry fully before plugging back in.
- Do not submerge in water.
- Do not use detergent or soap when cleaning.


GOOD FOR: NECK, SHOULDERS, BACK, WAIST AND THIGHS

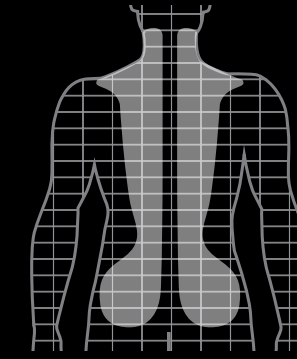


BACK

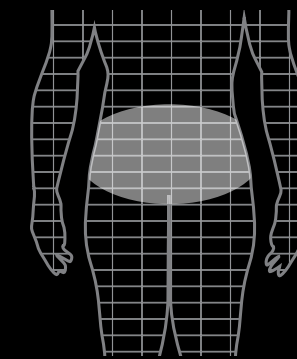 

WAIST

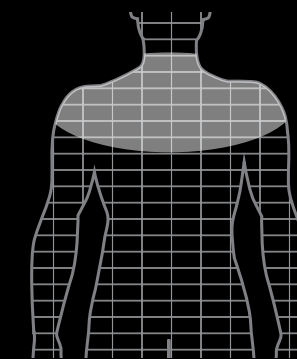 

NECK + SHOULDERS

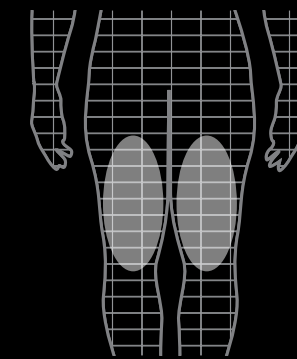 

THIGHS

SAFETY WARNINGS

PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Do not use this item if you are pregnant or have an injury or illness. Consult your physician if you have a medical condition that may prevent safe use of this item.
- Do not use attachments of any kind other than those that may be included.
- Do not fall asleep while using.
- Keep long hair away from this item while it is in use.
- Do not leave this item unattended when it is plugged in.
- Always allow item to cool if it becomes too hot.
- Never operate under blankets where air opening may be blocked. Excessive heat can occur and cause fire, electric shock, or injury to persons.
- Do not expose to extreme temperatures or moisture.
- Keep away from sources of water and heated surfaces.
- Never touch the power plug with wet hands.
- Do not carry this item by its cord.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

RECHARGEABLE BATTERY WARNING

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.

DANGER



To reduce the risk of electric shock, always unplug this appliance from the electrical outlet immediately after using and before cleaning.



SHARPER IMAGE® NAME AND LOGO (INCLUDING THE 77 LOGO) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2020 MERCHSOURCE, LLC, IRVINE, CA 92618. ALL RIGHTS RESERVED.