

 
# SHARP®

## SWB3085HS UNPACKING INSTRUCTIONS

### STEP 1


**NOTE:** Before beginning the unboxing and installation of the appliance, please ensure you are wearing protective gloves.

- Use scissors to safely cut outer strapping.

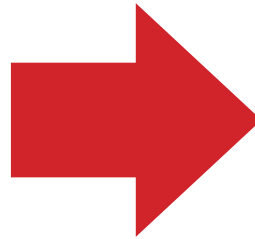


## STEP 2

 - Using two people, lift the cardboard carton straight up and off the appliance. Flatten the cardboard and set aside.

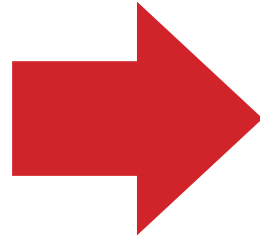

## STEP 3

 - Remove all wood strips and cardboard corner protectors.

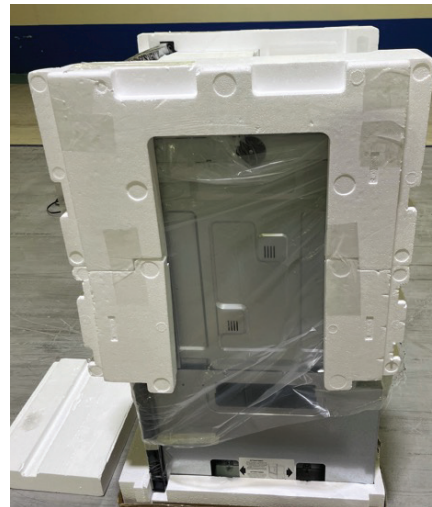

## STEP 4

- Remove all packing foam and the plastic bag.



## STEP 5

 
 
- Before lifting the unit off of the pallet, please remove the door. **A minimum of 2 people are required to move and lift the appliance.**

### REMOVE THE OVEN DOOR

**IMPORTANT:** The oven door is heavy and fragile, and the door front is glass. To avoid oven door glass breakage, use both hands, and grasp only the sides of the oven door to remove.

**DO NOT LIFT THE DOOR BY THE HANDLE.**

1. Open the oven door.
2. Locate the door latches in both corners of the oven door, and rotate the latches forward to the unlocked position.
3. Grasp the edges of the oven door with both hands, keeping the door slightly ajar. Lift up and pull oven door toward you to remove. Set the oven door aside on a covered work surface.

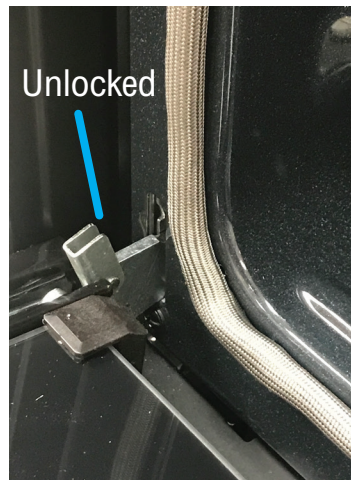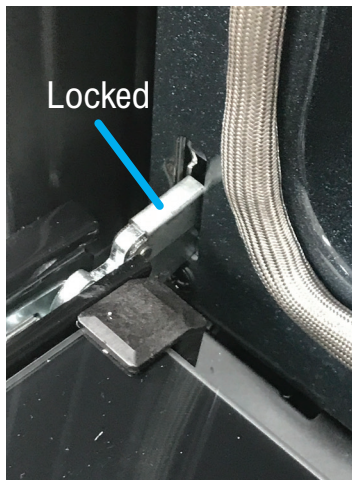

## STEP 6

- Using a minimum of two people, lift the appliance off the pallet. Please see below for suggested lift points for the unit.
- Place the appliance on cardboard to avoid floor damage.



## STEP 7

- Follow all included Installation Instructions (Located in the envelope packet in the wall oven on the top rack).
- **Read the Installation Instructions carefully before attempting the installation.**



**SHARP**

**SHARP SMART CONVECTION WALL OVEN WITH  
MICROWAVE DRAWER™ OVEN  
MODEL: SWB3085HS  
INSTALLATION INSTRUCTIONS**

**YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages:



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and one of the following words: DANGER, WARNING or CAUTION.

**▲ DANGER**

An imminently hazardous situation. You could be killed or seriously injured if you don't immediately follow instructions.

**▲ WARNING**

A potentially hazardous situation which, if not avoided, could result in death or serious bodily injury.

**▲ CAUTION**

A potentially hazardous situation which, if not avoided, may result in moderate or minor injury.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury and tell you what can happen if the instructions are not followed.

State of California Proposition 65 Warnings:

**WARNING:** This product contains one or more chemicals known to the State of California to cause cancer.

**WARNING:** This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

# CONTACT US

If at any time you have questions or comments concerning your SHARP product, please contact the SHARP Customer Assistance Center. We are available to assist you through multiple contact methods for your convenience:

 <p><b>EMAIL</b> Available 24/7 US: sharpusa.com</p>	 <p><b>CHAT ONLINE</b> Mon-Fri: 7am-7pm CST Sat-Sun: 9am-7pm CST</p>	 <p><b>CALL US</b> US <b>800-BE-SHARP</b> 800-237-4277 Mon-Fri: 7am-7pm CST Sat-Sun: 9am-7pm CST</p>
<p>See the Contact Us section on our sites</p>	<p>U.S.   <a href="http://www.sharpusa.com/support">www.sharpusa.com/support</a></p>	<p>Contact a Sharp Advisor on the phone</p>

