



M3200

SEWING MACHINE



FEATURES & BENEFITS

23 STITCHES

Basic, stretch and decorative stitches for sewing a wide range of fabrics and sewing techniques. Also includes a four-step buttonhole.

FOUR-STEP BUTTONHOLE

Buttonhole sewing is a simple four-step process, clearly marked on the Stitch Selector Dial to help you make the buttonhole the size you need for your project.

EASY STITCH SELECTION

Stitches are clearly displayed on the Stitch Selector Dial. Just turn the dial to select your stitch.

ADJUSTABLE STITCH LENGTH

Use the Stitch Length Dial to customize stitches for various sewing techniques and decorative applications.

ADJUSTABLE STITCH WIDTH

Use the Stitch Width Dial to customize stitch width for a variety of sewing techniques and decorative applications.

QUICK AND EASY THREADING

Simple-to-follow threading guides for winding the bobbin and threading the upper thread are conveniently marked directly on the machine.

NEEDLE THREADER

Effortlessly threads the eye of the needle for you, saving time and eliminating eye strain.

FULL METAL FRAME

This internal rigid metal support keeps your machine stable and helps ensure long lasting durability.

FRONT-LOADING BOBBIN

The machine uses a SINGER® Class 15 (transparent style) bobbin. Just place the bobbin into the bobbin holder, draw up the bobbin thread and you're ready to sew.

ADJUSTABLE THREAD TENSION

Depending on your fabric and thread selection, the Thread Tension Dial can be used to fine-tune the look of your stitch as desired.

STAYBRIGHT™ LED LIGHTING

Long lasting LED lighting provides bright illumination of the sewing area to help eliminate shadows.

EXTRA HIGH PRESSER FOOT LIFT

Offers more clearance under the presser foot, which is needed when placing multiple layers or thick fabric underneath it.

FREE ARM

Slide the Removable Storage Compartment off the machine to access the free arm for sewing cuffs, collars, trouser hems and more.

FREE ACCESSORIES INCLUDED

Presser feet included are the All-Purpose Foot, Four-Step Buttonhole Foot, Zipper Foot, and Button Sewing Foot. Other included accessories are: Pack of Needles, Seam Ripper/Lint Brush, Screwdriver, Extra SINGER® Class 15 Bobbins (transparent style), Spool Pin Felt and Darning Plate, and Soft Dust Cover. Accessories can be stored inside the Removable Storage Compartment.

ONLINE INSTRUCTION MANUAL

Your full instruction manual is available online anytime to view or download.

