

BLACK+DECKER

TM

GETTING STARTED WITH YOUR

 **WIFI ENABLED**
6 QUART SLOW COOKER*



*Mobile device not included.

FREQUENTLY ASKED QUESTIONS

WiFi ENABLED
6 QUART SLOW COOKER

How do I turn on remote access to change the programming?

Once synced and the slow cooker is plugged in, as long as you're connected to the internet you're able to remotely program or adjust your slow cooker.

Do I need to be near my slow cooker & router during set-up?

Until the connection is established it is important that the slow cooker, router, and smart devices are within the same room. This will help speed up the connection process during set-up. After that, the slow cooker just needs to be within range of your home router.

Can I use my tablet with the Wifi Slow Cooker?

Yes, any Apple® device running version iOS 7.0 or higher OR Android™ device running version 4.4 or higher is able to download and use the app.

Can I control the same slow cooker with multiple devices?

Yes, simply login with the email and password you used to first register the slow cooker. This allows you to control that one slow cooker with multiple devices.

Why am I not seeing the Wifi Slow Cooker network during initial set up?

Make sure the slow cooker is plugged in and the Wifi light is blinking (by pressing the start and stop button at the same time). It may take a minute for it to show up. If it still doesn't appear, unplug the slow cooker and follow the same steps.

Do you need an internet connection in order for the slow cooker to work?

To use or monitor remotely, an internet connection is needed. However, the slow cooker can be used as a traditional digital slow cooker without the app. Simply program on the control panel and press start to cook without an internet connection.

What happens during a power outage?

If connected to the internet the slow cooker will send a push notification when the connection is lost, and also when the connection is reestablished. If cooking without the app and the power is lost, the slow cooker will simply stop cooking. If the slow cooker lost connection or power less than 2 hours, simply reprogram and keep cooking. If connection or power was lost longer than 2 hours, or you're unsure of how long, discard the food.

These are abbreviated instructions. See the enclosed Instruction Booklet for warnings and complete instructions.

WiFi CONNECTIVITY

On the home screen & cook program screen the slow cooker color will change depending on status:

OFFLINE



Please check Wifi and slow cooker connection

ONLINE/READY



Enter desired settings to cook!

ERROR STATE



Please check Wifi and slow cooker connection

COOKING



Check status with the app or on the control panel

Congratulations on the purchase of your

WIFI ENABLED 6 QUART SLOW COOKER[†]

Program or adjust at home or while on the go with the FREE downloadable app

To get started you will need:


- + The Wifi Enabled Slow Cooker
- + Apple® device using iOS 7.0 or higher **OR** Android™ Device using version 4.4 or higher
- + Wifi Router*
- + Internet connection

DOWNLOAD THE APP



Download the free app from the Apple® App Store® or the Google Play™ store by searching the key words **"Black and Decker Wifi Enabled Slow Cooker"**

OPEN THE APP

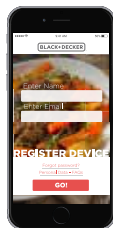

- 1 Open the app, and the registration page will open up.
- 2 Enter your email and password that you wish to use for all future log-ins. Please save this information in a safe location.
- 3 Read & agree to the terms and conditions and press GO.

SEARCH FOR CONNECTION



- 1 Plug in the appliance and press the Start and Stop button until the red Wifi light blinks.
- 2 Make sure the router is on and your smart device is connected to your home Wifi.

FOLLOW ON-SCREEN PROMPTS



- 1 Select your home network and enter your home router password, then click next.
- 2 Select the Wifi slow cooker network and enter the password "12345678" and set. This password will always stay the same.
- 3 The slow cooker should now be synced to your smart device.

PROGRAM, COOK & ENJOY



- 1 From the home screen open up the slow cooker to program.
- 2 Enter the desired temperature setting.
- 3 Enter the desired cook time.
- 4 Press start to cook!
- 5 Adjust or check progress anywhere where you have an internet connection.

Enjoy

This Quick Start Guide
applies to the model:
SCW3000S

© 2016 The Black & Decker Corporation and Spectrum Brands, Inc.

BLACK & DECKER, BLACK+DECKER, the BLACK & DECKER and BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

Android, Google Play, and the Google Play logo are trademarks of Google Inc.

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Made and Printed in People's Republic of China

Images on screens may differ slightly from that pictured

T22-5003325

14922-00

*Temporarily not supported by 5G wireless networks †Mobile device not included.