



Instruction & Styling Guide
For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Model HS18RT



PEINADOS
Look n.º 1: Rizos apretados

Entrolle el cabello hasta el cuero cabelludo. Retire los rulos cuando estén fríos, y separe los rizos con los dedos o un peine de dientes anchos.



Look n.º 2: Rizos sueltos


Divida el cabello en secciones anchas y enrollélo solamente hasta la mitad. Retire los rulos antes de que se entren completamente, y separe los rizos con los dedos o un peine de dientes anchos.

COMO QUITAR LOS RULOS HOT STICKS®
Abra con cuidado el rulo, deslizando el extremo recto fuera del anillo, y desenrolle suavemente el cabello. Después de quitar todos los rulos, permita que el cabello se enfríe y luego pongalo en forma con los dedos o un peine de dientes anchos. No se recomienda usar un cepillo; esto cambiaría la textura de los rizos, lo que afectará el peinado. Vuelva a colocar los rulos en el aparato antes de guardarlo.

Los rulos Hot Sticks® son lavables. Si lo desea, límpielos con un paño húmedo con detergente o jabón suaves antes de guardarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿sabía usted que un aparato eléctrico permanece en tensión, aunque este apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

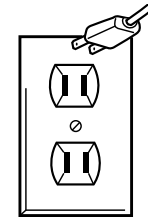

MANTÉNGALO ALEJADO DEL AGUA

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

regir para usted.

Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos

para usted.

que las limitaciones mencionadas pueden no regir en la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

ESCRITA. Algunos Estados no permiten limitaciones POR LOS 12 MESES DE LA PRESENTE GARANTÍA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS RESPONSABILIDAD IMPLÍCITA, INCLUYENDO CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO

partir de la fecha de fabricación.

compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

instrucciones de envío. En ausencia del recibo de llamar al 1-800-3-CONAIR para recibir necesitan dar una prueba de compra y deben recibo de compra. Los residentes de California solo Servicio indicado a continuación, junto con su devuelva el producto defectuoso al Centro de Para obtener servicio técnico bajo esta garantía, de fabricación o materiales.

producto sin cargo por un período de 12 meses a partir de la fecha de compra si presenta defectos Conair reparará o reemplazará (a su opción) este producto sin cargo por un período de 12 meses a partir de la fecha de compra si presenta defectos

GARANTÍA LIMITADA DE UN AÑO (VÁLIDA EN LOS EE. UU. Y EN CANADÁ SOLAMENTE)

LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

21NP081033

©2022 CONAIR LLC

Glendale, AZ 85307
Service Department
7475 N. Glen Harbor Blvd.

Conair LLC

Centro de servicio


www.conair.com/registration

Para registrar este producto, visítenos en:

IB-17455

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

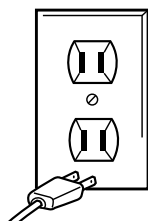

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Modelo HS18RT

CONAIR®

Para su seguridad y para distribuir instrucciones y guía de peinado, siempre lea atentamente las instrucciones antes del uso.



TO REMOVE HOT STICKS® ROLLERS

Carefully remove rollers by sliding end of roller from hole and gently unwinding. Once all rollers are removed, allow hair to cool, then style as desired, using fingers or a wide-tooth comb. We do not recommend using a brush, as brushing may change the look and shape of the curl and affect the style. Put rollers back into appropriate compartments for storage.

Hot Sticks® rollers are washable. If desired, use a damp cloth with mild detergent or soap and let dry before putting back in the hairsetter unit.

HAIRSTYLES

Look 1: Tight Curls

Roll hair up all the way. Unroll when cool and then separate each curl with your fingers or with a wide-tooth comb.



Look 2: Loose Curls

Take a large section, and roll hair up halfway. Remove before rollers cool and then separate curls using your fingers or a wide-tooth comb.

