




GLENDALE, GLENVIEW, RIDGEDALE, RICHMOND CABANA

Model # 2102569, 2102576,
2102583, 2102590, 2102606,
2102613, 2102620, 2102637,
2102644, 2102651

Owner's Manual & Assembly Instructions


MANUFACTURED
BY: Backyard
Discovery 3305
Airport Drive
Pittsburg, KS
66762
800-856-4445

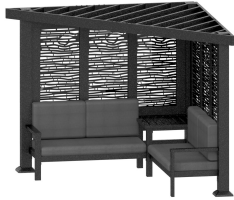


2102569 GLENDALE
CABANA (BLACK BAMBOO -
CAST SLATE)




2102576 GLENDALE
CABANA (BLACK BAMBOO -
SPECTRUM INDIGO)

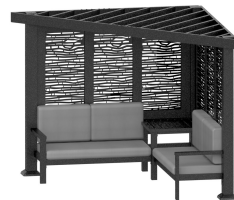


2102583 GLENDALE
CABANA (BLACK BAMBOO -
CAST PUMICE)

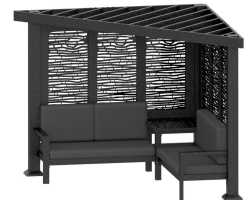


2102590 GLENDALE
CABANA (BLACK BAMBOO -
CANVAS TERRACOTTA)

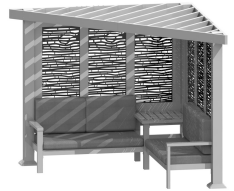


2102613 RIDGEDALE
CABANA (BLACK BAMBOO -
CAST SLATE)

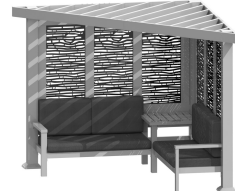


2102620 RIDGEDALE
CABANA (BLACK BAMBOO -
SPECTRUM INDIGO)

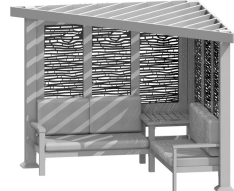


2102637 RIDGEDALE
CABANA (BLACK BAMBOO -
CAST PUMICE)

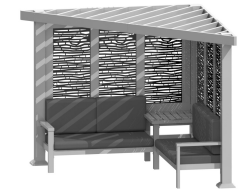

2102644 RIDGEDALE
CABANA (BLACK BAMBOO -
CANVAS TERRACOTTA)

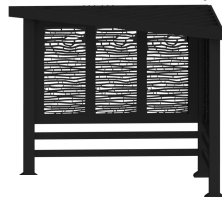

2102606 GLENVIEW
CABANA (BLACK BAMBOO)

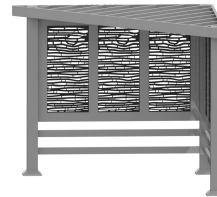

2102651 RICHMOND
CABANA (BLACK BAMBOO)



**INSTALLATION
SERVICES
AVAILABLE!***

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

*Installation services are only available
to U.S. customers.

average 2 person assembly time



assembly time may vary based on skill level

Before you begin

**FOR QUICK &
EASY ASSEMBLY**
FIND 3D INSTRUCTIONS
FOR THIS PRODUCT IN

BILT.

DOWNLOAD THE FREE APP



For the most up to date assembly manual,
to register your set, or to order replacement parts
please visit

www.backyarddiscovery.com

**SAVE THIS ASSEMBLY MANUAL FOR FUTURE REFERENCE IN THE EVENT
THAT YOU NEED TO ORDER REPLACEMENT PARTS.**

Para obtener instrucciones en español, visite www.backyarddiscovery.com



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

****Installation services are only available
to U.S. customers.***

With Go Configure, we bring you 18 years of experience right to your doorstep.
We service a wide array of indoor and outdoor recreation products that most
consumers don't have the time or ability to deliver & install themselves.

We do the heavy lifting, so you don't have to!

-
- 18+ Years of Experience Servicing Big Box Retailers and Direct Consumers
 - Highly Skilled, Specialized, Courteous, Professional Service Technicians
 - Over 140,000 Installations Annually
 - White Glove Service

- Satisfaction Guarantee
- Flexible Appointments, including weekends
- Coverage across the nation

Visit www.goconfigure.com for more info!

****Installation services are only available to U.S. customers.***



STOP

**MISSING A PART?
CALL US BEFORE GOING
BACK TO THE STORE**

The store where you made your purchase
does not stock parts for this item.
If you have assembly questions or you are
missing or have damaged parts, please call

1-800-856-4445

you can also visit www.backyarddiscovery.com
or e-mail customerservice@backyarddiscovery.com

Please have the following information ready when you make your call:

- Model Number of the product located on the front of the assembly manual
 - The item description and number from the parts list from the manual that was included in your box
-
- Read entire assembly manual, paying special attention to the important tips and safety information.
 - To ensure there are no missing pieces do a complete inventory by first separating and identifying all parts.
 - Make sure to check packing material for small parts that may have fallen out during shipment.
 - Structures are not intended for public use. The Company does not warranty any of its residential structures subjected to commercial use.
 - This manual contains helpful information concerning assembly preparation, installation procedure and required maintenance.
 - Always keep safety in mind as your structure is being built.
 - Keep these instructions for future reference.



OUTDOOR PATIO ITEMS

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE

This Limited Warranty by Backyard Discovery applies to products manufactured under the Backyard Discovery brand or its other brands, including but not limited to, Adventure Playsets and Leisure Time Products.

Backyard Discovery Wood Patio Structure

Backyard Discovery warrants this wood patio product to be free from defects in materials and workmanship for a period of two (2) years from the original date of purchase. All wood carries a five (5) year warranty against rot and decay from the original purchase date.

Backyard Discovery Metal Patio Structure

Backyard Discovery warrants this metal patio product to be free from defect in materials and workmanship for a period of five (5) years from the original date of purchase.

General Warranty Information

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure maximum life and performance of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in the Owner's Manual.

This Limited Warranty does not cover:

- Natural occurring properties of wood such as twisting, warping, checking, peeling or any other natural occurring properties of wood that do not affect performance or integrity.
- Installation – the warranty is null and void if installation is not in accordance with the Assembly Instructions.
- Labor for any inspection
- Labor for replacement of any defective item(s)
- Incidental or consequential damages
- Cosmetic defects, including rusting, color fading, minor cracks, corrosion, which do not affect performance or integrity of a part or the entire product.
- Vandalism, improper use, failure due to loading or use beyond the capacities stated in the applicable Assembly Manual.
- Acts of nature including but not limited to wind, storms, hail, floods, excessive water exposure.
- Improper installation including but not limited to installation on uneven, unlevel, or soft ground.

Backyard Discovery products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification voids any-and-all warranties and Backyard Discovery assumes no liability for the modified products or consequences resulting from failure of a modified product. Backyard Discovery disclaims all other representations and warranties of any kind, express or implied.

USA and Canada: To make a warranty or replacement part claim please visit backyarddiscovery.com or call Backyard Discovery customer service at 800-856-4445. Backyard Discovery will, at its sole discretion, replace any part within the stated warranty period that is defective in workmanship or materials. At Backyard Discovery's discretion, photographs of the defective part, physical return of the defective part to Backyard Discovery, or proof of purchase may be required for verification.

Outside of the USA and Canada: Contact place of purchase or distributor for warranty service.

This Warranty gives you specific legal rights. You may have other rights as well which vary from state to state, province to province or country to country, where you bought the product. This warranty excludes all consequential damages however, some states do not allow the limitation or exclusion of consequential damages and therefore this limitation may not apply to you.



Please read entire booklet completely before beginning the assembly process

Please retain these instructions and your receipt for future reference. Keep them in a safe place where you can refer to them as needed.
In order to provide you with the most efficient service, it is required that you provide us with the part numbers when ordering parts.

For Your Records:

Please take time and fill out the information below. This information will be needed for warranty issues.

Where Purchased: _____
Date of Purchase: _____
Installation Date: _____
Installed by: _____
Tracking Number: _____

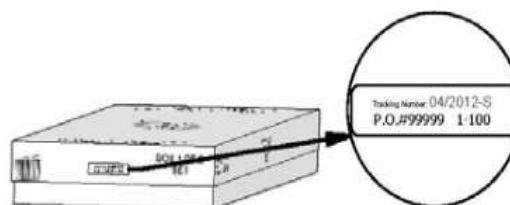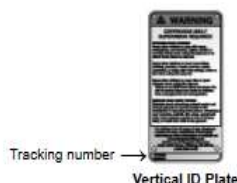

Tracking Number Reference Label

Tracking ID number on the carton and on the bottom of the vertical ID plate are included for tracking purposes associated with warranty claims.



WARNING

IT IS IMPORTANT TO CHECK AND TIGHTEN ALL HARDWARE AT THE BEGINNING AND DURING THE SEASON AS THEY MAY LOOSEN DUE TO EXPANSION AND CONTRACTION.

- **DO NOT climb or walk on the roof for any reason**
- **Requires two or more people to assemble safely**
- **Check for underground utilities before digging or driving stakes into the ground.**
- **Check carefully for overhead lines and ensure there is at least 6ft (2m) clearance from any overhead electrical wires.**
- **Permanent structures may require a building permit. As the purchaser and or installer of this product you are advised to consult local planning, zoning and building inspection departments for guidance on applicable building codes and/or zoning requirements.**
- Wear gloves to avoid injury during installation.
- During installation, follow all safety warnings provided with your tools and use safety glasses.
- Check all nuts and bolts twice monthly during the usage season and tighten as required. It is particularly important that this procedure be followed at the beginning of each season.
- Oil all metallic moving parts monthly during the usage period.
- Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- For rusted areas on metallic members such as hinges, brackets, etc. sand and repaint, using a non lead-based paint meeting the requirements of Title 16 CRF Part 1303.
- Touch up paint is available through Backyard Discovery. Please have the product number tag available for reference for customer support. This insures the correct color will be provided.


OWNERS SHALL BE RESPONSIBLE FOR MAINTAINING THE LEGIBILITY OF THE WARNING LABELS



ASSEMBLY TIP:

Keep and eye out for these boxes which will contain helpful pictures and information making the assembly process as quick and painless as possible.


Sorting Parts

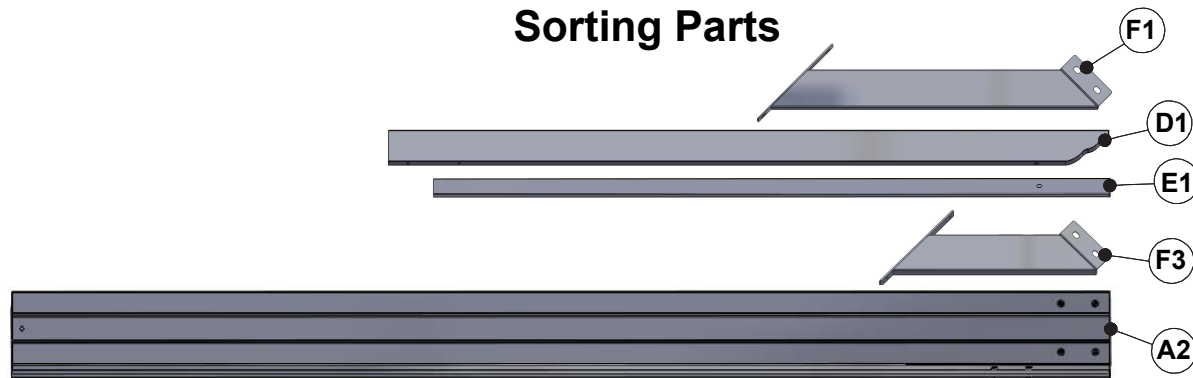

When removing the parts from the boxes we recommend arranging them by part number before you begin assembly. This will allow for faster assembly and easily identify any parts that may be missing or damaged.

Hardware is identified with a seven digit alpha-numeric part number. During assembly you only need to reference the last three digits of the part number as noted in each step. This will make finding the correct hardware easier.


Hardware Identification



H101040 | HEX PAN HEAD
(24) | M6x1x20

053 (x4)
STEEL WASHER - 6x20


054 (x4)
RUBBER WASHER - 6x20

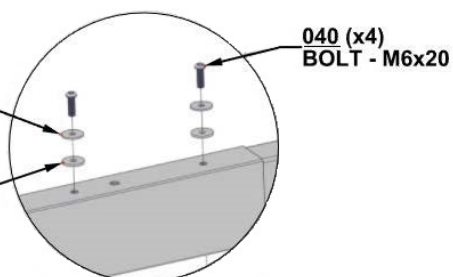


Tools Required




Some steps in the assembly process will require a second set of hands. Make sure you have a helper available.

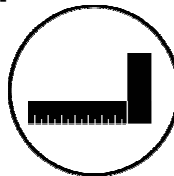


You will need to make sure that your assembly is square before fully tightening your bolts.

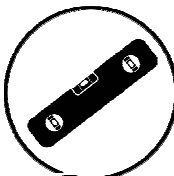

For proper assembly you will need to ensure that your structure is level before proceeding to the next step.

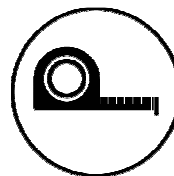

A tape measure may be needed to check overall dimensions to ensure structure is square.

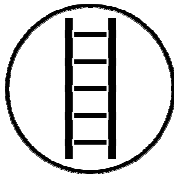

A ladder will be needed for assembly. DO NOT stand or climb on any part of the structure at any point. Doing so may result in injury.



A rubber mallet may be useful during the assembly process.



A Phillips head screw driver will be used in an assembly step.



It is critically important that you start with square and level footings, concrete pad or deck to attach your structure

- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines


Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is NOT included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.



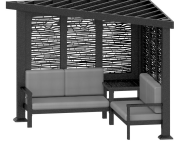

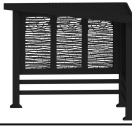
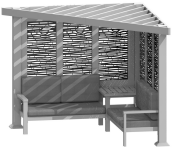
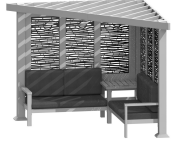

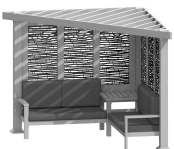

Metal Roof Assembly

Remove plastic covering from metal roof panels before installing each piece. Place roofing materials on a nonabrasive, flat surface before and after assembly as it could bend, dent or scratch

Overall Dimensions

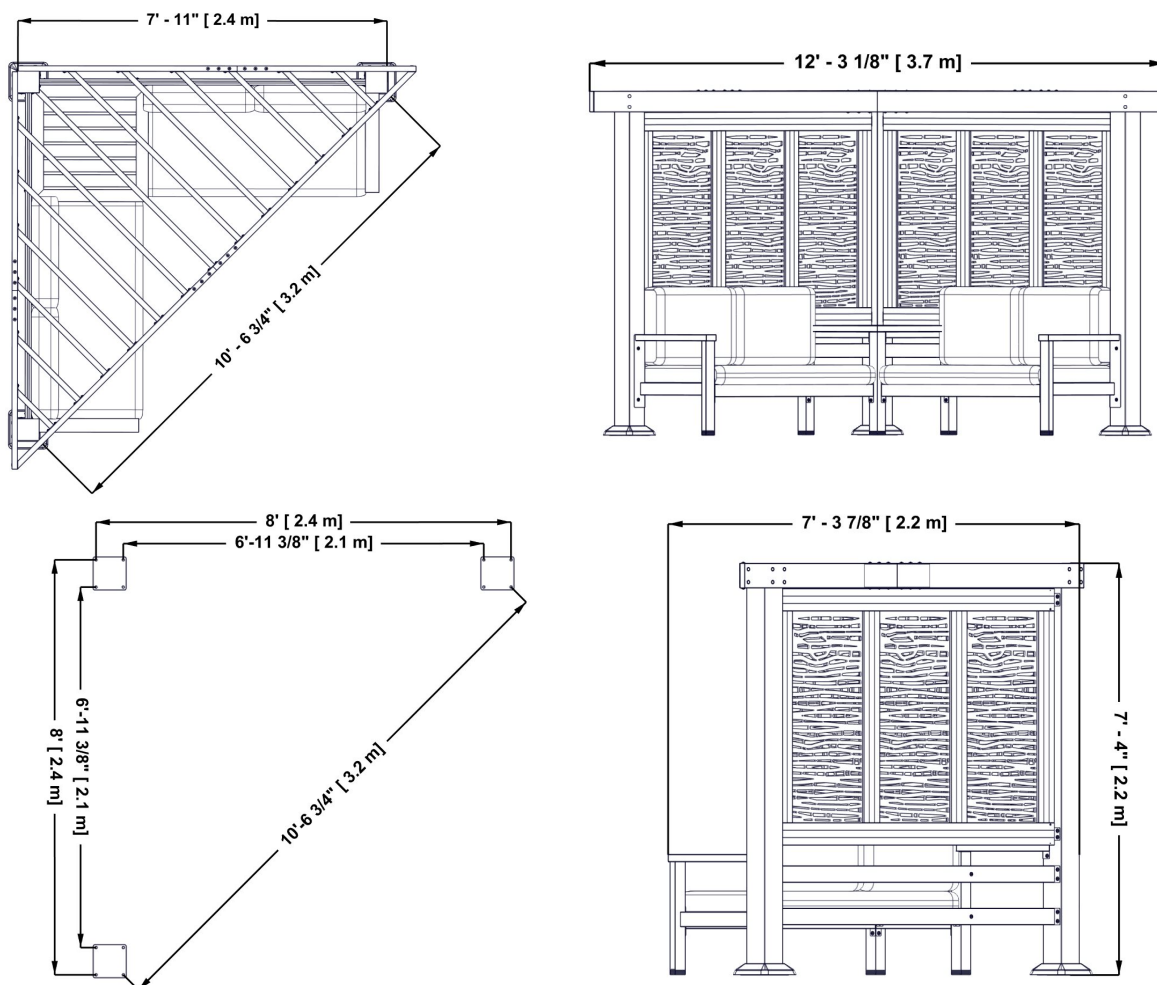

BEFORE YOU BEGIN THE ASSEMBLY OF YOUR BACKYARD DISCOVERY CABANA PERGOLA PLEASE USE THE TABLE BELOW TO ENSURE YOU RECEIVED ALL COMPONENTS NEEDED FOR THE ITEM # YOU PURCHASED. IF YOU ARE MISSING ANY CARTONS PLEASE CONTACT OUR CUSTOMER SERVICE TEAM AT 1-800-856-5424.

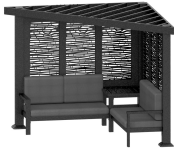
ITEM # ORDERED	NAME	IMAGE	COMPONENT LIST	TOTAL # OF CARTONS
2102569	GLENDAL CABANA		9205529-1 - Modern Steel Kit with Furniture Black 9205529-2 - Modern Steel Kit with Furniture Black 9205529-3 - Modern Steel Kit with Furniture Black 9205529-4 - Modern Steel Kit with Furniture Black 9205352 - Composite Bamboo Black Panels 9205109 - Cast Slate Cushions	6 TOTAL CARTONS
2102576	GLENDAL CABANA		9205529-1 - Modern Steel Kit with Furniture Black 9205529-2 - Modern Steel Kit with Furniture Black 9205529-3 - Modern Steel Kit with Furniture Black 9205529-4 - Modern Steel Kit with Furniture Black 9205352 - Composite Bamboo Black Panels 9205116 - Spectrum Indigo Cushions	6 TOTAL CARTONS
2102583	GLENDAL CABANA		9205529-1 - Modern Steel Kit with Furniture Black 9205529-2 - Modern Steel Kit with Furniture Black 9205529-3 - Modern Steel Kit with Furniture Black 9205529-4 - Modern Steel Kit with Furniture Black 9205352 - Composite Bamboo Black Panels 9205123 - Cast Pumice Cushions	6 TOTAL CARTONS
2102590	GLENDAL CABANA		9205529-1 - Modern Steel Kit with Furniture Black 9205529-2 - Modern Steel Kit with Furniture Black 9205529-3 - Modern Steel Kit with Furniture Black 9205529-4 - Modern Steel Kit with Furniture Black 9205352 - Composite Bamboo Black Panels 9205130 - Canvas Terracota Cushions	6 TOTAL CARTONS
2102606	GLENVIEW CABANA		9205512 - 1 - Modern Steel Kit without Furniture Black 9205512 - 2 - Modern Steel Kit without Furniture Black 9205512 - 3 - Modern Steel Kit without Furniture Black 9205352 - Composite Bamboo Black Panels	4 TOTAL CARTONS
2102613	RIDGEDALE CABANA		9205543 - 1 - Modern Steel Kit with Furniture White 9205543 - 2 - Modern Steel Kit with Furniture White 9205543 - 3 - Modern Steel Kit with Furniture White 9205543 - 4 - Modern Steel Kit with Furniture White 9205352 - Composite Bamboo Black Panels 9205109 - Cast Slate Cushions	6 TOTAL CARTONS
2102620	RIDGEDALE CABANA		9205543 - 1 - Modern Steel Kit with Furniture White 9205543 - 2 - Modern Steel Kit with Furniture White 9205543 - 3 - Modern Steel Kit with Furniture White 9205543 - 4 - Modern Steel Kit with Furniture White 9205352 - Composite Bamboo Black Panels 9205116 - Spectrum Indigo Cushions	6 TOTAL CARTONS
2102637	RIDGEDALE CABANA		9205543 - 1 - Modern Steel Kit with Furniture White 9205543 - 2 - Modern Steel Kit with Furniture White 9205543 - 3 - Modern Steel Kit with Furniture White 9205543 - 4 - Modern Steel Kit with Furniture White 9205352 - Composite Bamboo Black Panels 9205123 - Cast Pumice Cushions	6 TOTAL CARTONS
2102644	RIDGEDALE CABANA		9205543 - 1 - Modern Steel Kit with Furniture White 9205543 - 2 - Modern Steel Kit with Furniture White 9205543 - 3 - Modern Steel Kit with Furniture White 9205543 - 4 - Modern Steel Kit with Furniture White 9205352 - Composite Bamboo Black Panels 9205130 - Canvas Terracota Cushions	6 TOTAL CARTONS
2102651	RICHMOND CABANA		9205536 - 1 - Modern Steel Kit without Furniture White 9205536 - 2 - Modern Steel Kit without Furniture White 9205536 - 3 - Modern Steel Kit without Furniture White 9205352 - Composite Bamboo Black Panels	4 TOTAL CARTONS



Metal Components (Not to Scale)




A1 | POST - A4M01339
(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)




A2 | POST - A4M01340
(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)



A3 | POST - A4M01341
(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)



B1 | JOIST END - A4M01342
(2) 1 3/8"x5 1/4"x56 3/8" (36x134x1432)



B2 | JOIST END - A4M01343
(2) 1 3/8"x5 1/4"x46 1/8" (36x134x1171)



C | JOIST END - A4M01344
(2) 1 3/8"x5 1/4"x72 1/2" (36x134x1842)



Metal Components (Not to Scale)



D1 | JOIST - A4M01345
(1) 3 1/2"x5 1/4"x65" (90x134x1650)



D2 | JOIST - A4M01346
(2) 3 1/2"x5 1/4"x63" (90x134x1599)



D3 | JOIST - A4M01347
(2) 3 1/2"x5 1/4"x53 1/4" (90x134x1352)



D4 | JOIST - A4M01348
(2) 3 1/2"x5 1/4"x43 1/2" (90x134x1104)



D5 | JOIST - A4M01349
(2) 3 1/2"x5 1/4"x33 3/4" (90x134x856)



D6 | JOIST - A4M01350
(2) 3 1/2"x5 1/4"x24" (90x134x608)



D7 | JOIST - A4M01351
(2) 3 1/2"x5 1/4"x14 1/8" (90x134x360)



E1 | PANEL RAIL - A4M01322
(4) 1 1/8"x4 3/4"x84 1/8" (80x122x2137)




E2 | PANEL RAIL - A4M01323
(8) 1 5/8"x4 3/4"x47 1/4" (40x122x1200)



F1 | BRACE - A4M01324
(2) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)




F2 | BRACE - A4M01325
(2) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)




O | SPLICE BRACKET - A4M01337
(3) 1 3/8"x5 1/8"x19 5/8" (33x131x500)




Metal Components (Not to Scale)

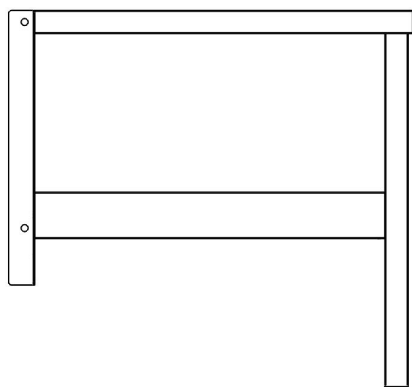


G1 | SEAT SIDE - A4M01326
(1) 3 1/2"x25 3/4"x27 3/8" (90x653x696)

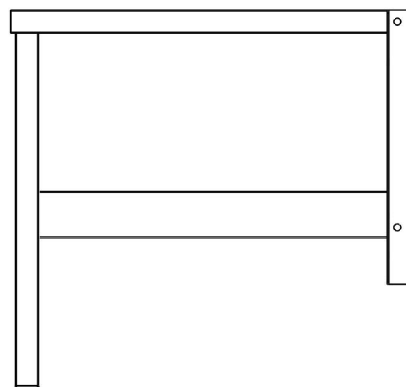


G2 | SEAT SIDE - A4M01327
(1) 3 1/2"x25 3/4"x27 3/8" (90x653x696)




J1 | TABLE LEG - A4M01330
(1) 3"x3"x26 3/8" (75x75x669)




J2 | TABLE LEG - A4M01331
(1) 3"x3"x26 3/8" (75x75x669)




J3 | TABLE LEG - A4M01332
(1) 3"x3"x26 3/8" (75x75x669)



K | TABLE BRACE - A4M01333
(2) 1 5/8"x6 1/4"x22 7/8" (40x160x580)

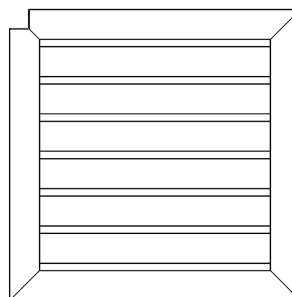

L | TABLE TOP - A4M01334
(1) 4 3/8"x30 1/8"x30 1/8" (110x765x765)



H1 | SEAT FRONT BRACE - A4M01328
(2) 1 5/8"x6 1/4"x57 1/2" (40x160x1460)



P | SLAT BRACKET - A4M01338
(4) 2 1/4"x2 1/2"x57 1/4" (57x65x1455)



I | SEAT SLAT - A4M01329
(24) 3/4"x1 5/8"x25 3/8" (20x40x646)



Metal Components (Not to Scale)




A1 | POST - A4M01412
(1) | 5 1/2"x5 1/2"x87 1/2" (140x140x2223)




A2 | POST - A4M01413
(1) | 5 1/2"x5 1/2"x87 1/2" (140x140x2223)



A3 | POST - A4M01414
(1) | 5 1/2"x5 1/2"x87 1/2" (140x140x2223)



B1 | JOIST END - A4M01342
(2) | 1 3/8"x5 1/4"x56 3/8" (36x134x1432)



B2 | JOIST END - A4M01343
(2) | 1 3/8"x5 1/4"x46 1/8" (36x134x1171)



C | JOIST END - A4M01344
(2) | 1 3/8"x5 1/4"x72 1/2" (36x134x1842)



Metal Components (Not to Scale)




D1 | JOIST - A4M01345
(1) | 3 1/2"x5 1/4"x65" (90x134x1650)



D2 | JOIST - A4M01346
(2) | 3 1/2"x5 1/4"x63" (90x134x1599)



D3 | JOIST - A4M01347
(2) | 3 1/2"x5 1/4"x53 1/4" (90x134x1352)



D4 | JOIST - A4M01348
(2) | 3 1/2"x5 1/4"x43 1/2" (90x134x1104)



D5 | JOIST - A4M01349
(2) | 3 1/2"x5 1/4"x33 3/4" (90x134x856)



D6 | JOIST - A4M01350
(2) | 3 1/2"x5 1/4"x24" (90x134x608)



D7 | JOIST - A4M01351
(2) | 3 1/2"x5 1/4"x14 1/8" (90x134x360)




E1 | PANEL RAIL - A4M01322
(4) | 3 1/8"x4 3/4"x84 1/8" (80x122x2137)



E2 | PANEL RAIL - A4M01323
(8) | 1 5/8"x4 3/4"x47 1/4" (40x122x1200)




F1 | BRACE - A4M01408
(2) | 3 1/8"x3 1/2"x84 1/8" (80x90x2137)



O | SPLICE BRACKET - A4M01337
(3) | 1 3/8"x5 1/8"x19 5/8" (33x131x500)




Hardware Components




H101040 | HEX PAN HEAD
(214) | M6x1x20




H101043 | HEX SOCKET SCREW
(24) | M6x1x20

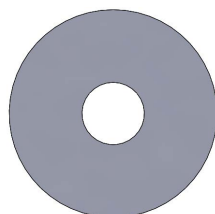

H101053 | STEEL WASHER
(218) | 6x20

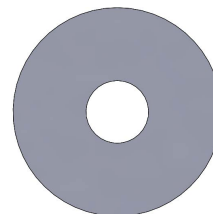


H101054 | SEALANT WASHER
(218)



H101049 | HEX PAN HEAD
(4) | M6x1x55



H101050 | SCREW
(8) | 4.8x32

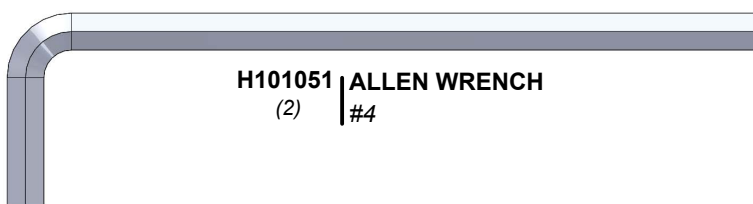


H101051 | ALLEN WRENCH
(2) | #4



H101052 | ALLEN BIT
(2) | #4




Hardware Components




H101040 | HEX PAN HEAD
(114) | M6x1x20



H101043 | HEX SOCKET SCREW
(24) | M6x1x20

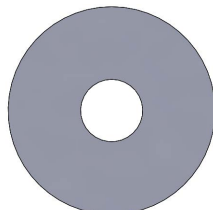


H101053 | STEEL WASHER
(114) | 6x20

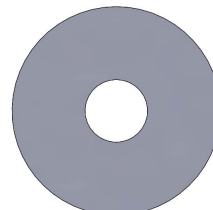

H101054 | SEALANT WASHER
(114)



H101050 | SCREW
(8) | 4.8x32

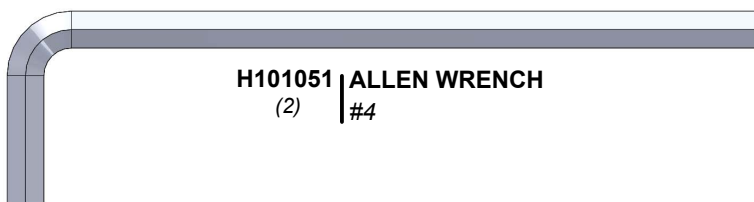


H101051 | ALLEN WRENCH
(2) | #4




H101052 | ALLEN BIT
(2) | #4




Accessory Components (Not to Scale)

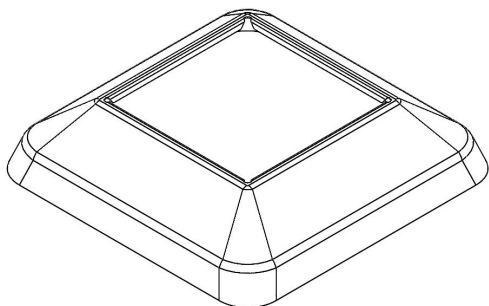


M | POST FOOT COVER - A4M01335
(3) | 3 1/8"x10 1/8"x10 1/8" (81x258x258)

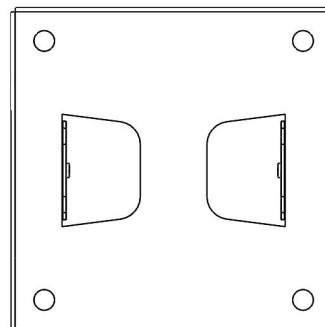

N1 | POST FOOT - A4M01336
(3) | 2 1/8"x7 7/8"x7 7/8" (54x201x201)

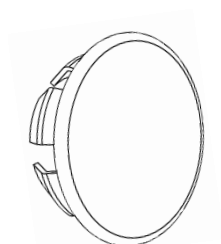


Q | HOLE COVER - A4M01352
(24)

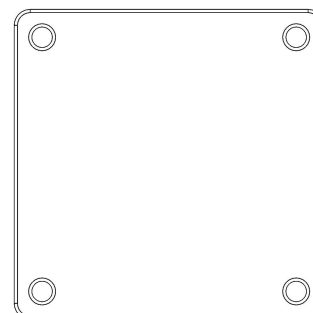

N2 | FOOT PLASTIC PLATE - A6P00472
(3) | 3/8"x7 5/8"x7 5/8" (11x195x195)




Accessory Components (Not to Scale)

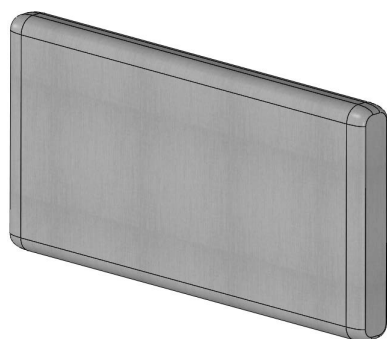


A6P00454
(2) SEAT CUSHION

9205123
CAST PUMICE

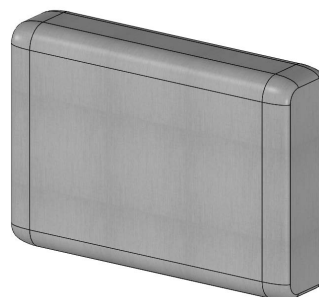

A6P00455
(4) BACK CUSHION

OR

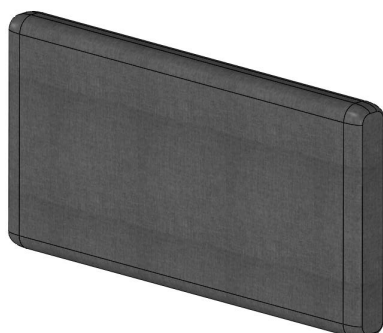


A6P00392
(2) SEAT CUSHION

9205109
CAST SLATE



A6P00393
(4) BACK CUSHION

OR

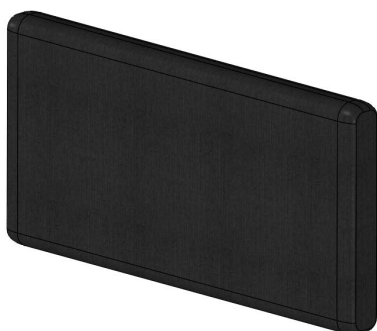


A6P00394
(2) SEAT CUSHION

9205116
SPECTRUM INDIGO



A6P00395
(4) BACK CUSHION

OR

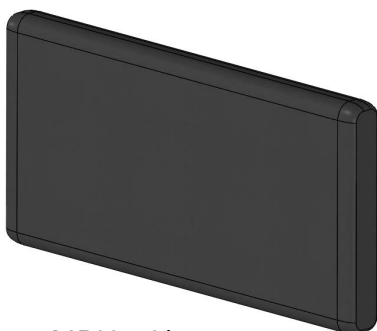


A6P00476
(2) SEAT CUSHION

9205130
CANVAS TERRACOTTA




A6P00477
(4) BACK CUSHION



Accessory Components (Not to Scale)

9205352

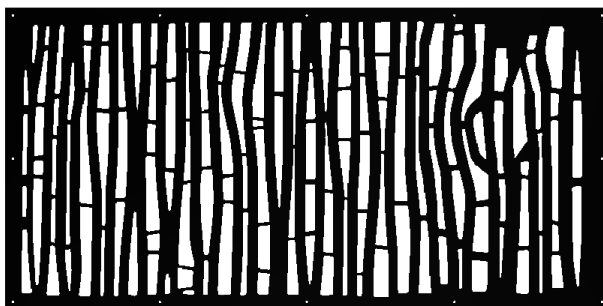


A6P00440
(6) | BLACK BAMBOO PANEL



CABANA ASSEMBLY

STEP 1



B1 | JOIST END - A4M01342
(2) 1 3/8"x5 1/4"x56 3/8" (36x134x1432)



O | SPLICE BRACKET - A4M01337
(2) 1 3/8"x5 1/8"x19 5/8" (33x131x500)



H101040 | HEX PAN HEAD
(12) M6x1x20



H101053 | STEEL WASHER
(12) 6x20




H101054 | SEALANT WASHER
(12)

COMPLETE THIS STEP TWICE.




DO NOT FULLY TIGHTEN BOLTS AT THIS STEP.

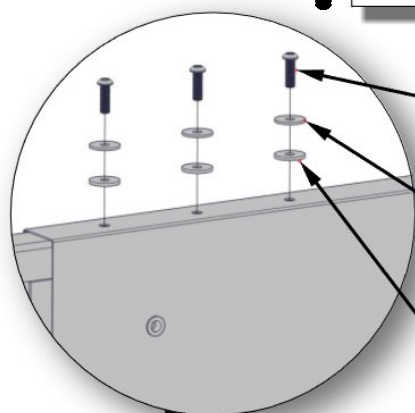

040 (x6)
BOLT - M6x20

053 (x6)
STEEL WASHER - 6x20


054 (x6)
SEALANT WASHER

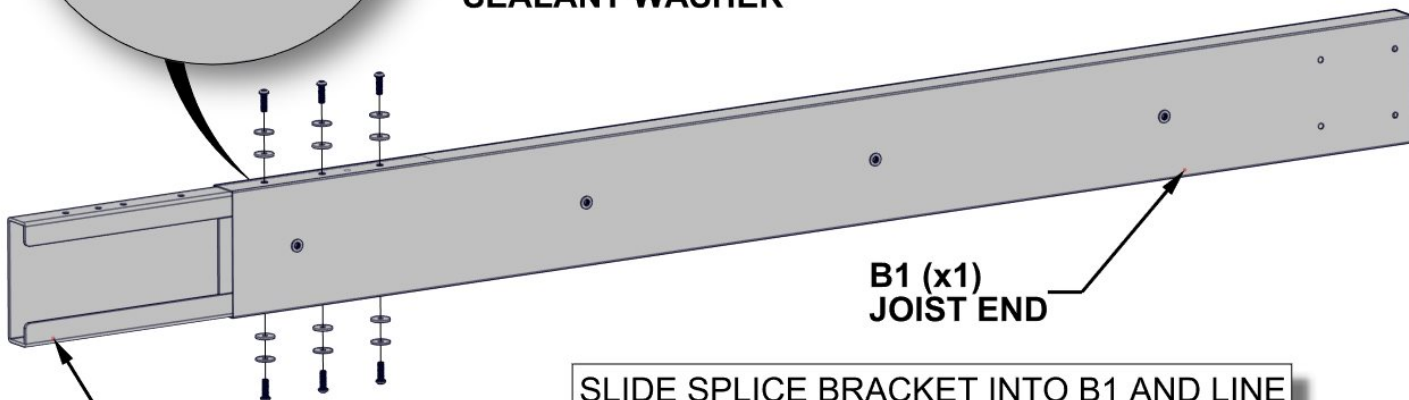

B1 (x1)
JOIST END

O (x1)
SPLICE BRACKET

SLIDE SPLICE BRACKET INTO B1 AND LINE UP THREE HOLES THEN INSERT BOLTS.



B2 | JOIST END - A4M01343
(2) 1 3/8"x5 1/4"x46 1/8" (36x134x1171)



H101040 | HEX PAN HEAD
(12) M6x1x20




H101053 | STEEL WASHER
(12) 6x20



H101054 | SEALANT WASHER
(12)

COMPLETE THIS STEP TWICE.

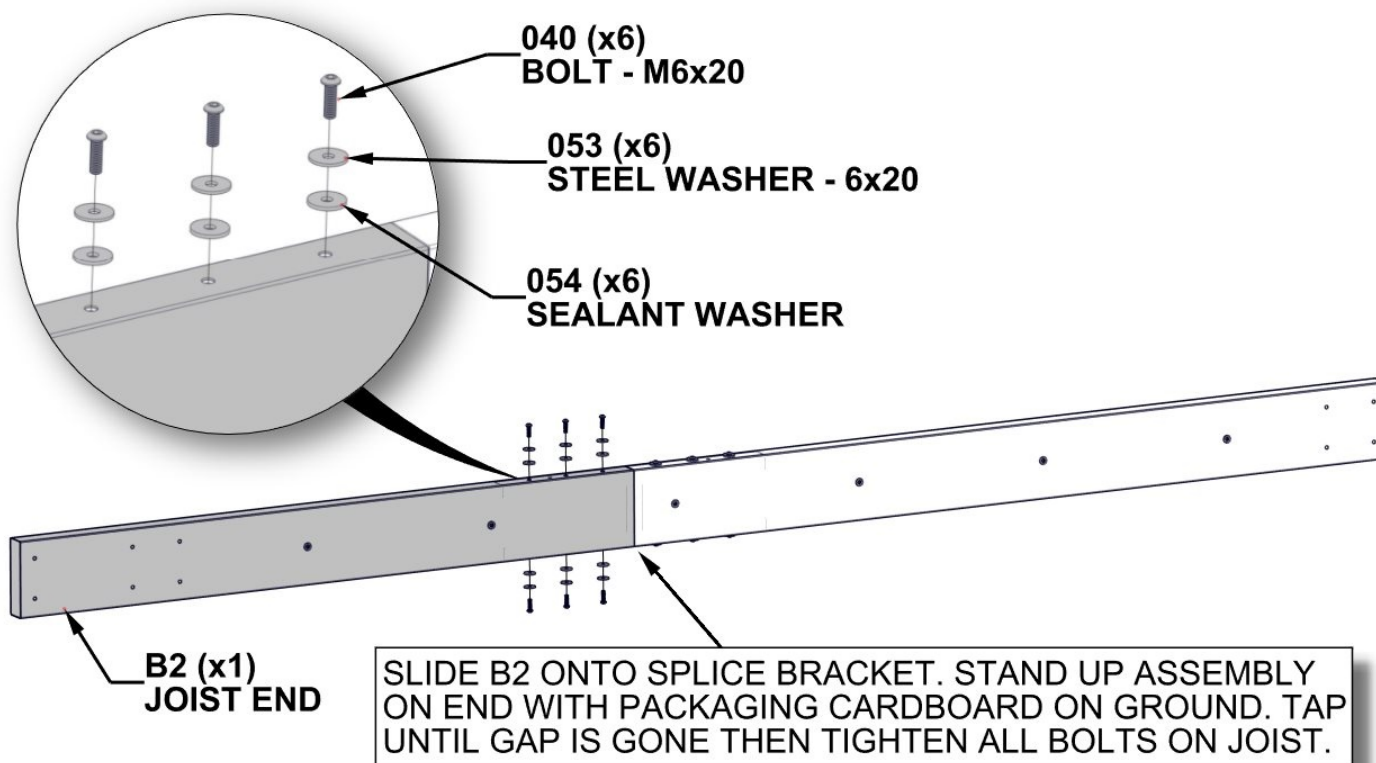



CABANA WITH SEATING ASSEMBLY

STEP 3 FOR: 9205529, 9205543

(1) JOIST ASSEMBLY - FROM PREVIOUS STEPS

A1 POST - A4M01339

(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)

F1 BRACE - A4M01324

(1) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)

A2 POST - A4M01340

(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)

F2 BRACE - A4M01325


(1) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)

H101040 HEX PAN HEAD
(8) M6x1x20

H101053 STEEL WASHER
(8) 6x20


H101043 HEX SOCKET SCREW
(8) M6x1x20

H101054 SEALANT WASHER
(8)

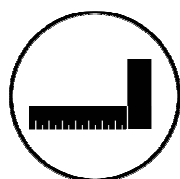

ENSURE THAT THESE HOLES ARE ORIENTED CORRECTLY. THEY SHOULD BE CLOSEST TO THIS SIDE OF THE ASSEMBLY. CORRECT ORIENTATION IS CRUCIAL FOR LATER STEPS.

**043 (x8)
BOLT - M6x20**

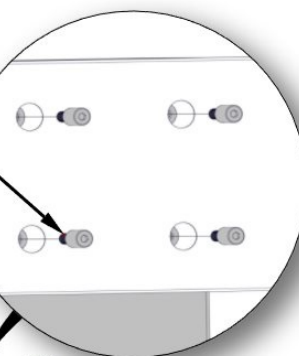

JOIST ASSEMBLY (x1)

**A1 (x1)
POST**

**F1 (x1)
BRACE**


**A2 (x1)
POST**

**F2 (x1)
BRACE**

**040 (x8)
BOLT - M6x20**

**053 (x8)
STEEL WASHER - 6x20**

**054 (x8)
SEALANT WASHER**

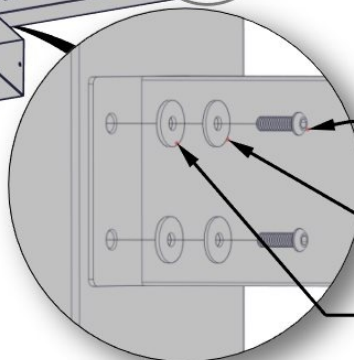

SQUARE UP JOIST AND BRACES TO POSTS THEN FULLY TIGHTEN ALL BOLTS.



CABANA WITHOUT SEATING ASSEMBLY

STEP 3 FOR: 9205512, 9205536



(1) JOIST ASSEMBLY - FROM PREVIOUS STEPS

A1 POST - A4M01412

(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)

A2 POST - A4M01413

(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)

F1 BRACE - A4M01408

(2) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)



H101040 HEX PAN HEAD
(8) M6x1x20





H101053 STEEL WASHER
(8) 6x20





H101043 HEX SOCKET SCREW
(8) M6x1x20



H101054 SEALANT WASHER
(8)

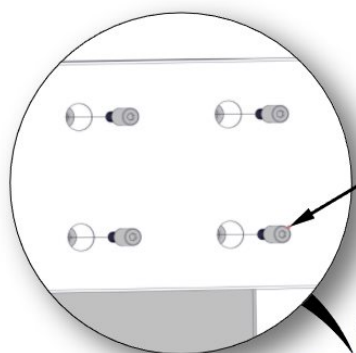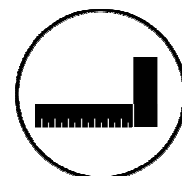

043 (x8)
BOLT - M6x20

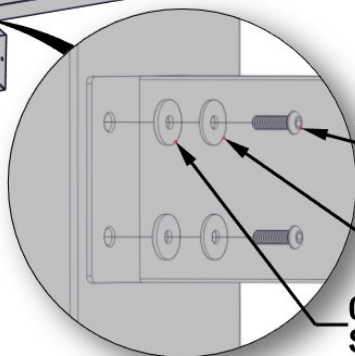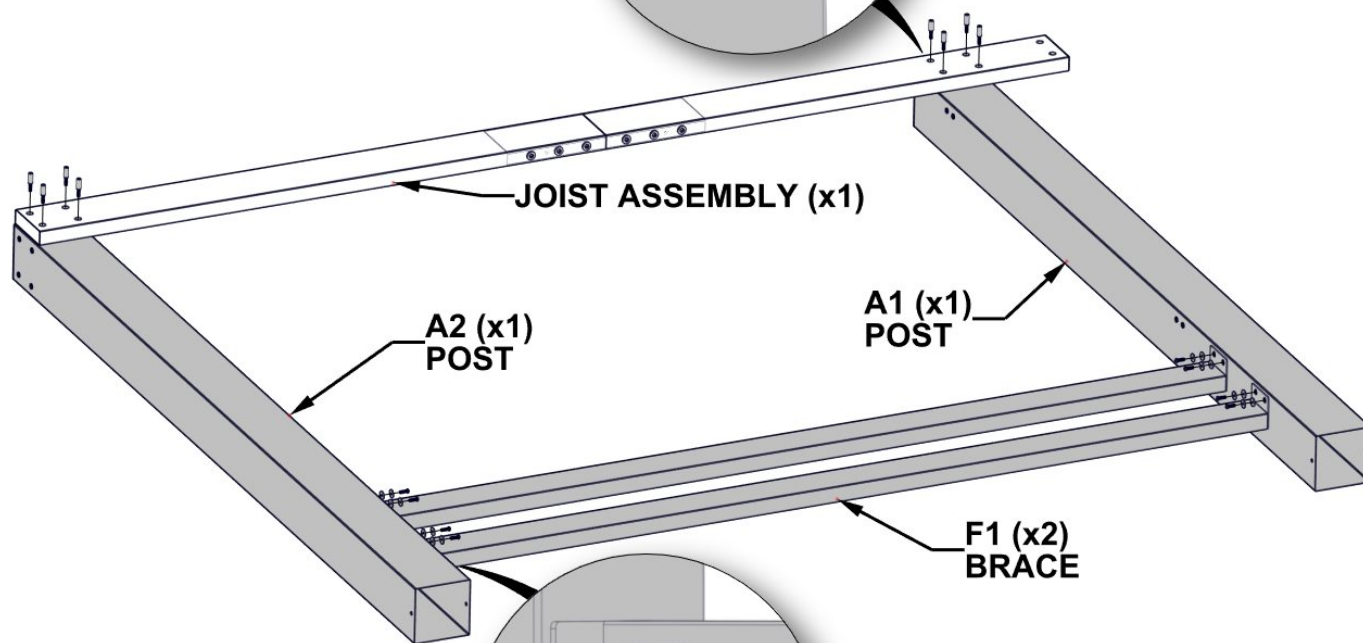


040 (x8)
BOLT - M6x20


053 (x8)
STEEL WASHER - 6x20

054 (x8)
SEALANT WASHER

SQUARE UP JOIST AND BRACES TO POSTS THEN FULLY TIGHTEN ALL BOLTS.

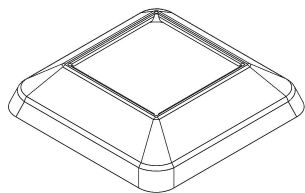

M | POST FOOT COVER - A4M01335
(2) 3 1/8"x10 1/8"x10 1/8" (81x258x258)

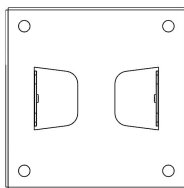

N1 | POST FOOT - A4M01336
(2) 2 1/8"x7 7/8"x7 7/8" (54x201x201)




H101040 | HEX PAN HEAD
(4) M6x1x20



H101053 | STEEL WASHER
(4) 6x20




H101054 | SEALANT WASHER
(4)

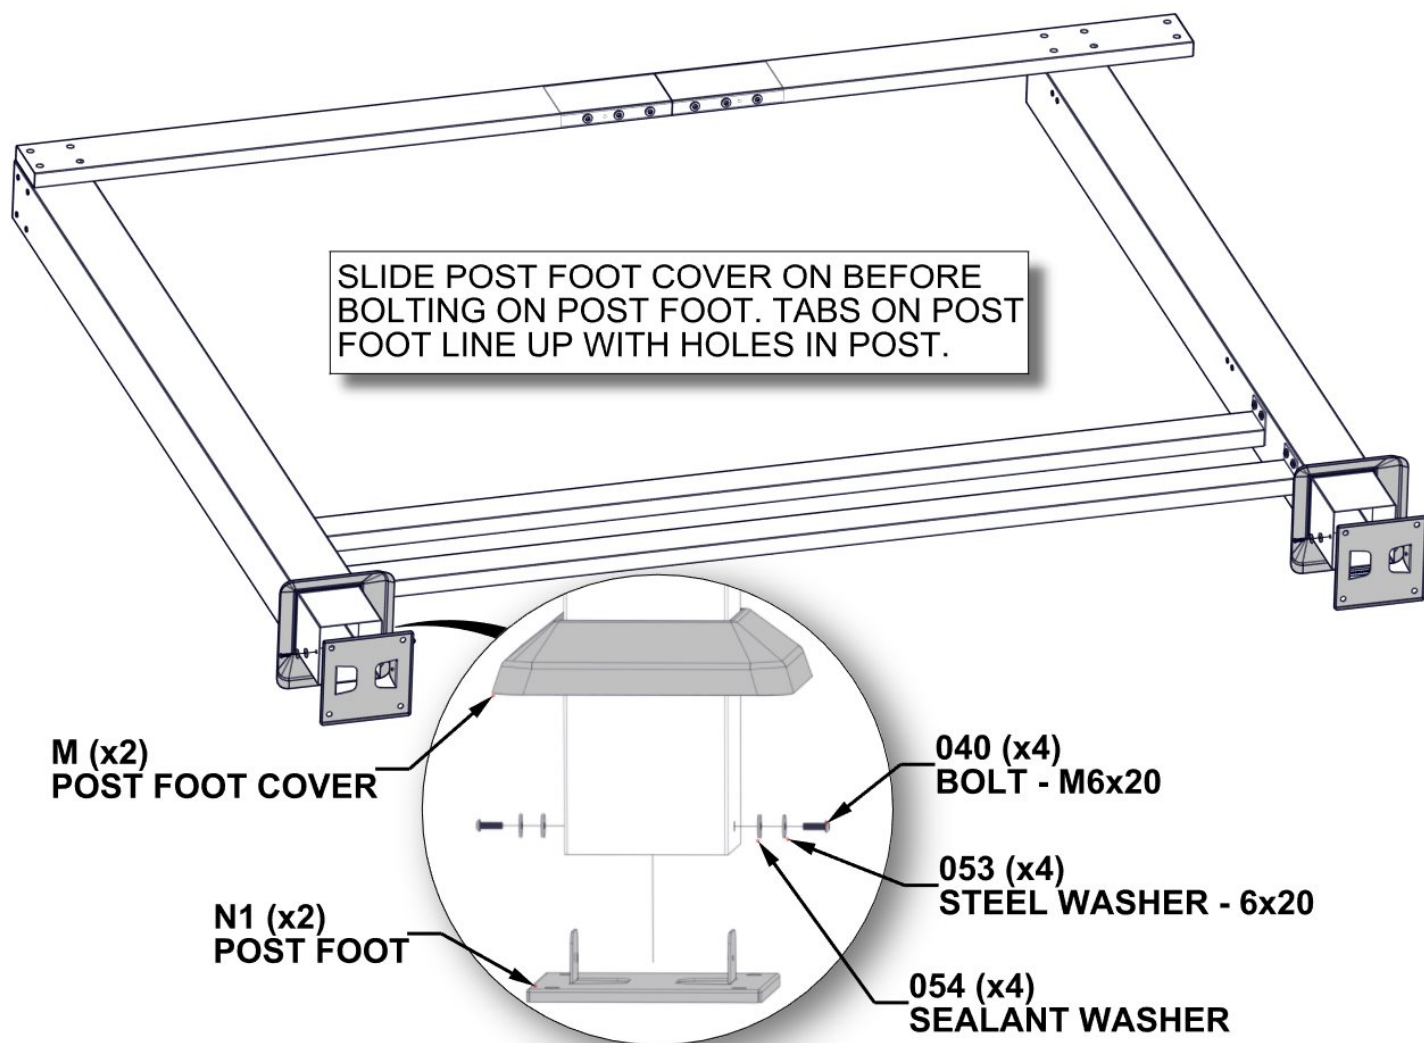



CABANA WITH SEATING ASSEMBLY

STEP 5 FOR: 9205529, 9205543



(1) JOIST ASSEMBLY - FROM PREVIOUS STEPS



A3 POST - A4M01341


(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)

F1 BRACE - A4M01324

(1) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)

F2 BRACE - A4M01325

(1) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)



M POST FOOT COVER - A4M01335

(1) 3 1/8"x10 1/8"x10 1/8" (81x258x258)



N1 POST FOOT - A4M01336

(1) 2 1/8"x7 7/8"x7 7/8" (54x201x201)



H101040 HEX PAN HEAD
(10) M6x1x20



H101053 STEEL WASHER
(10) 6x20




H101043 HEX SOCKET SCREW
(8) M6x1x20



H101054 SEALANT WASHER
(10)

SLIDE POST FOOT COVER ONTO POST. NEXT BOLT POST FOOT ONTO POST. STAND UP ASSEMBLY FROM PREVIOUS STEP AND BOLT ON BRACES, JOIST, AND POST.

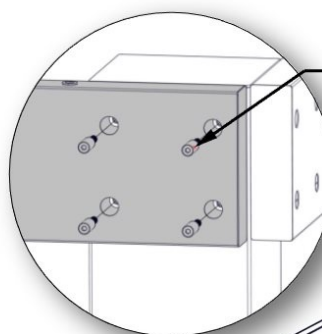

043 (x8)
BOLT - M6x20

A3 (x1)
POST

JOIST ASSEMBLY (x1)


ENSURE THAT THESE HOLES ARE ORIENTED CORRECTLY. THEY SHOULD BE CLOSEST TO THIS SIDE OF THE ASSEMBLY. CORRECT ORIENTATION IS CRUCIAL FOR LATER STEPS.

F1 (x1)
BRACE

F2 (x1)
BRACE

M (x1)
POST FOOT COVER

N1 (x1)
POST FOOT

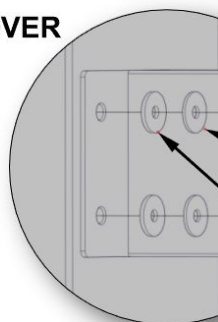



040 (x10)
BOLT - M6x20

053 (x10)
STEEL WASHER - 6x20

054 (x10)
SEALANT WASHER


SQUARE UP POST TO JOIST AND FULLY TIGHTEN ALL BOLTS.

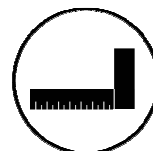



CABANA WITHOUT SEATING ASSEMBLY


STEP 5 FOR: 9205512, 9205536



(1) JOIST ASSEMBLY - FROM PREVIOUS STEPS

A3 POST - A4M01414

(1) 5 1/2"x5 1/2"x87 1/2" (140x140x2223)



M POST FOOT COVER - A4M01335

(1) 3 1/8"x10 1/8"x10 1/8" (81x258x258)



N1 POST FOOT - A4M01336

(1) 2 1/8"x7 7/8"x7 7/8" (54x201x201)

F1 BRACE - A4M01408

(2) 3 1/8"x3 1/2"x84 1/8" (80x90x2137)

H101040 HEX PAN HEAD
(10) M6x1x20




H101053 STEEL WASHER
(10) 6x20

H101043 HEX SOCKET SCREW
(8) M6x1x20






H101054 SEALANT WASHER
(10) 6x20

SLIDE POST FOOT COVER ONTO POST. NEXT BOLT POST FOOT ONTO POST. STAND UP ASSEMBLY FROM PREVIOUS STEP AND BOLT ON BRACES, JOIST, AND POST.

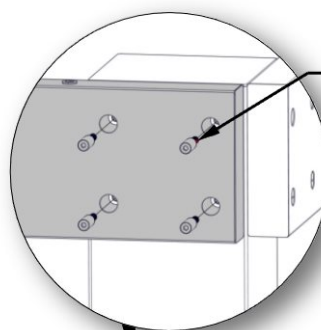

043 (x8)
BOLT - M6x20

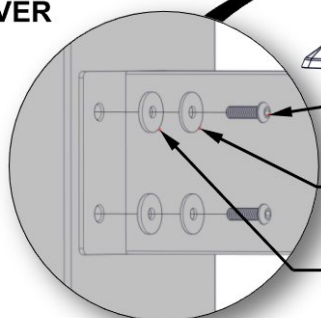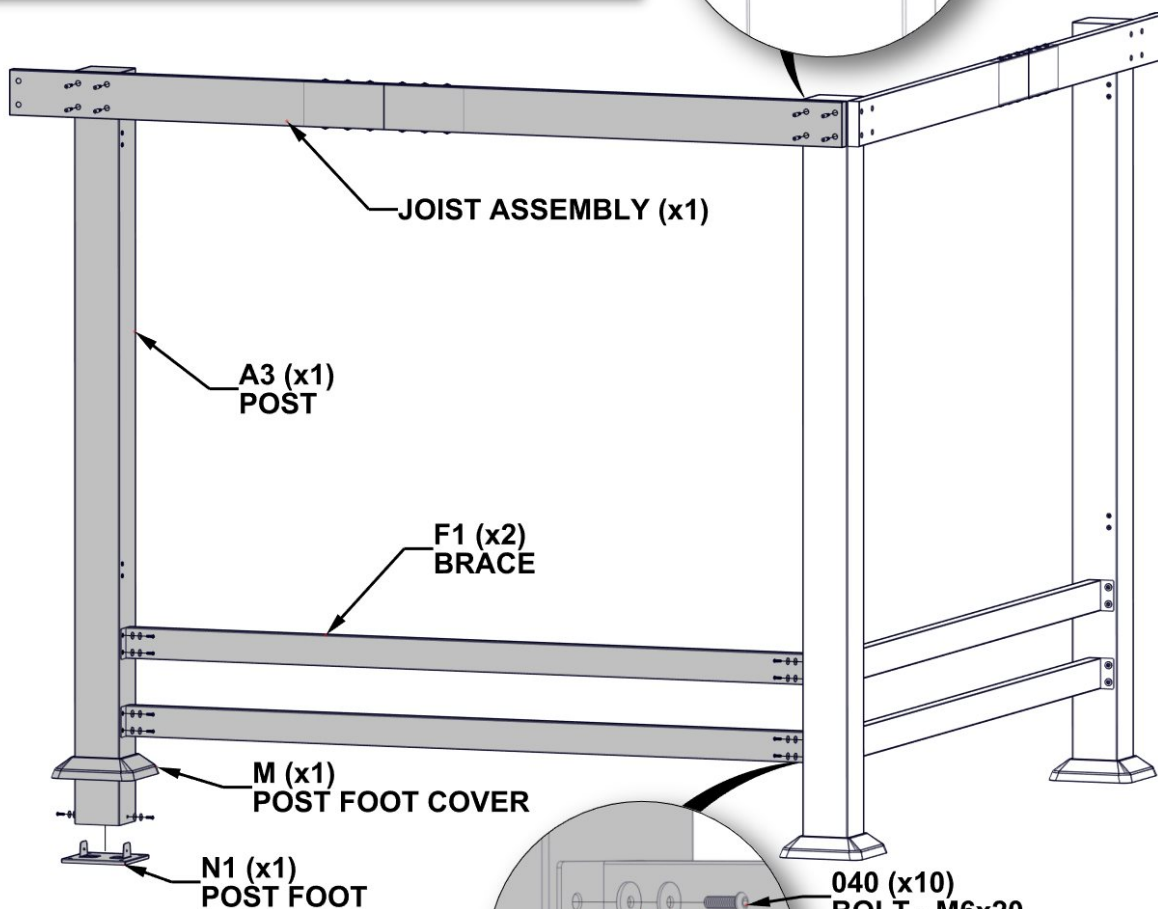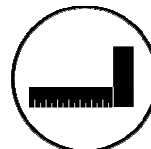

040 (x10)
BOLT - M6x20

053 (x10)
STEEL WASHER - 6x20

054 (x10)
SEALANT WASHER

SQUARE UP POST TO JOIST AND FULLY TIGHTEN ALL BOLTS.



C | JOIST END - A4M01344

(1) 1 3/8"x5 1/4"x72 1/2" (36x134x1842)



O | SPLICE BRACKET - A4M01337

(1) 1 3/8"x5 1/8"x19 5/8" (33x131x500)



H101040 | HEX PAN HEAD
(6) | M6x1x20




H101053 | STEEL WASHER
(6) | 6x20



H101054 | SEALANT WASHER
(6)



DO NOT FULLY TIGHTEN BOLTS AT THIS STEP.

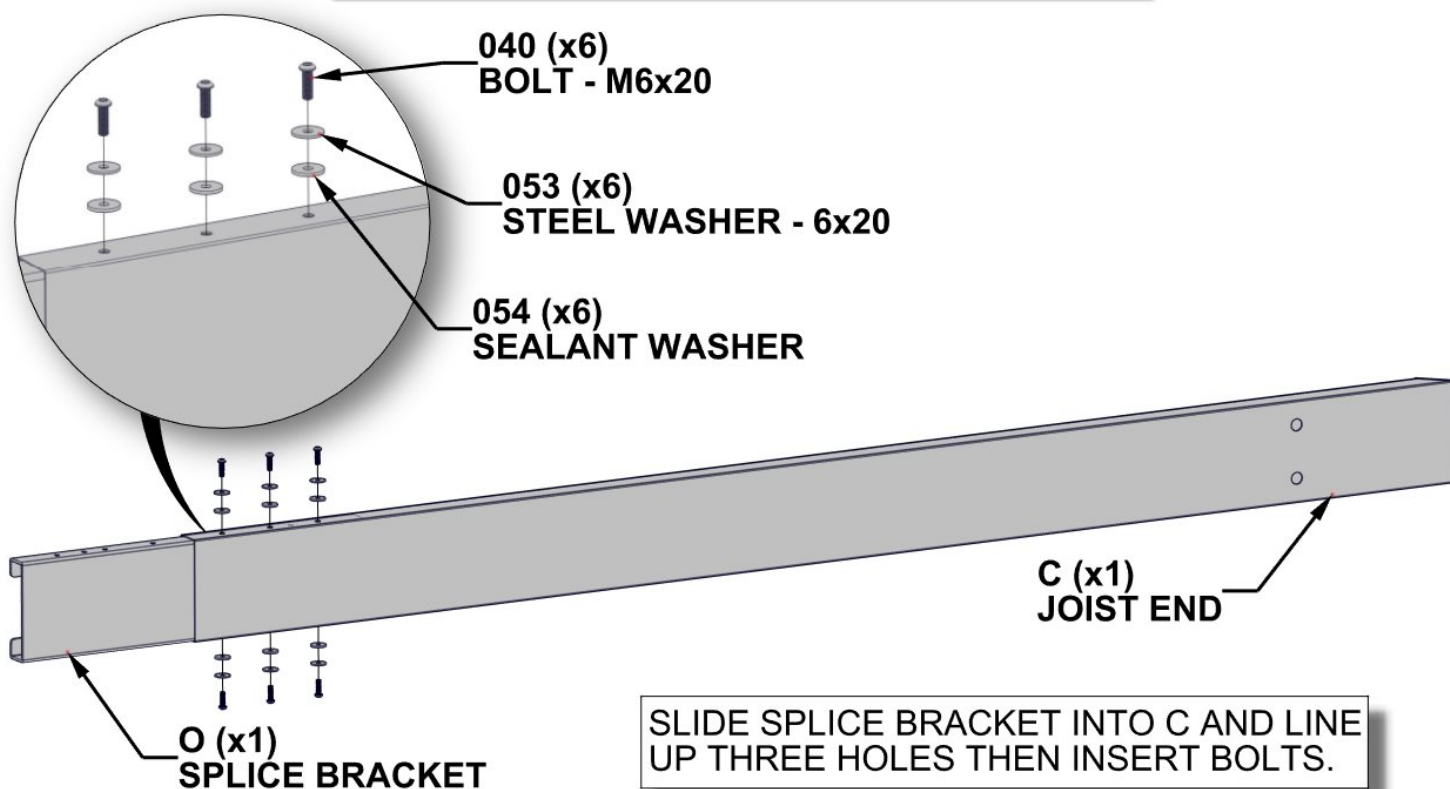



CABANA ASSEMBLY

STEP 7



C | JOIST END - A4M01344

(1) 1 3/8"x5 1/4"x72 1/2" (36x134x1842)



D7 | JOIST - A4M01351

(2) 3 1/2"x5 1/4"x14 1/8" (90x134x360)




H101040 | HEX PAN HEAD
(10) | M6x1x20



H101053 | STEEL WASHER
(10) | 6x20



H101054 | SEALANT WASHER
(10)

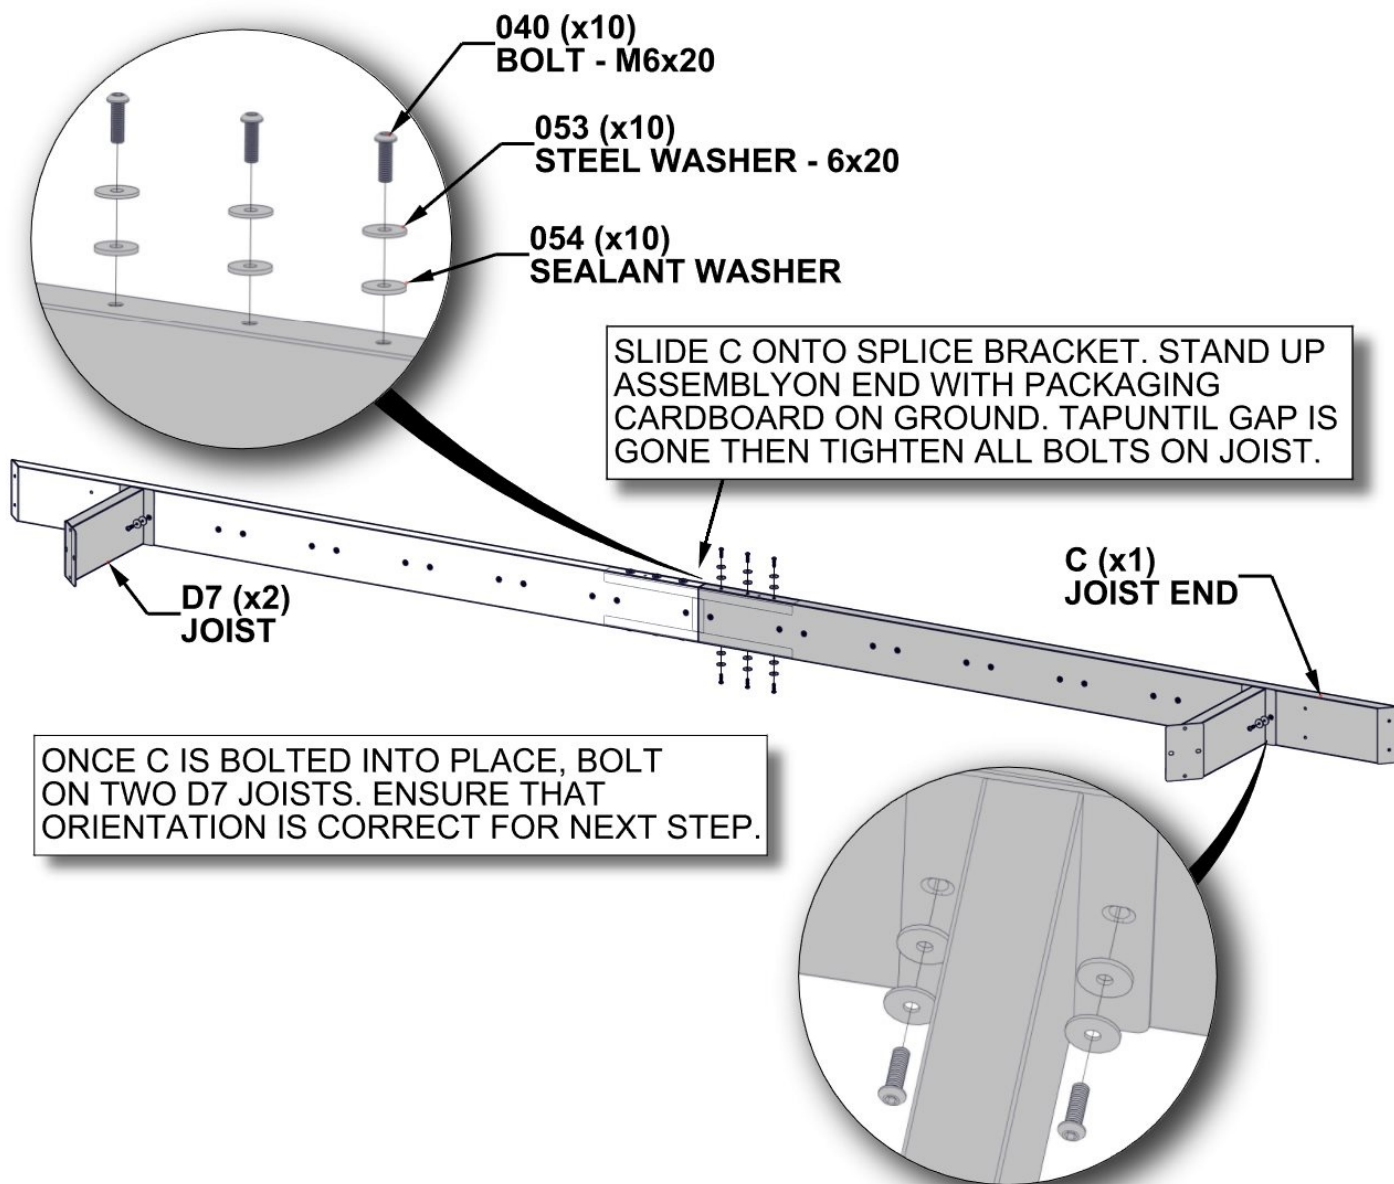



(1) JOIST ASSEMBLY - FROM PREVIOUS STEPS



H101040 | HEX PAN HEAD
(2) | M6x1x20




H101053 | STEEL WASHER
(2) | 6x20



H101043 | HEX SOCKET SCREW
(8) | M6x1x20






H101054 | SEALANT WASHER
(2) |

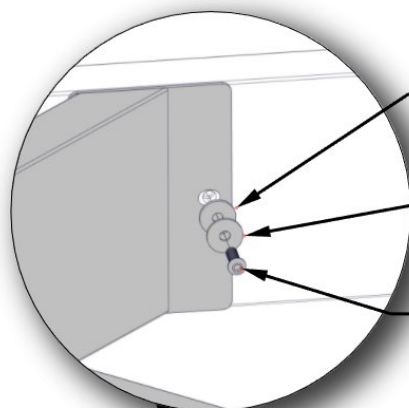

054 (x2)
SEALANT WASHER



053 (x2)
STEEL WASHER - 6x20

040 (x2)
BOLT - M6x20

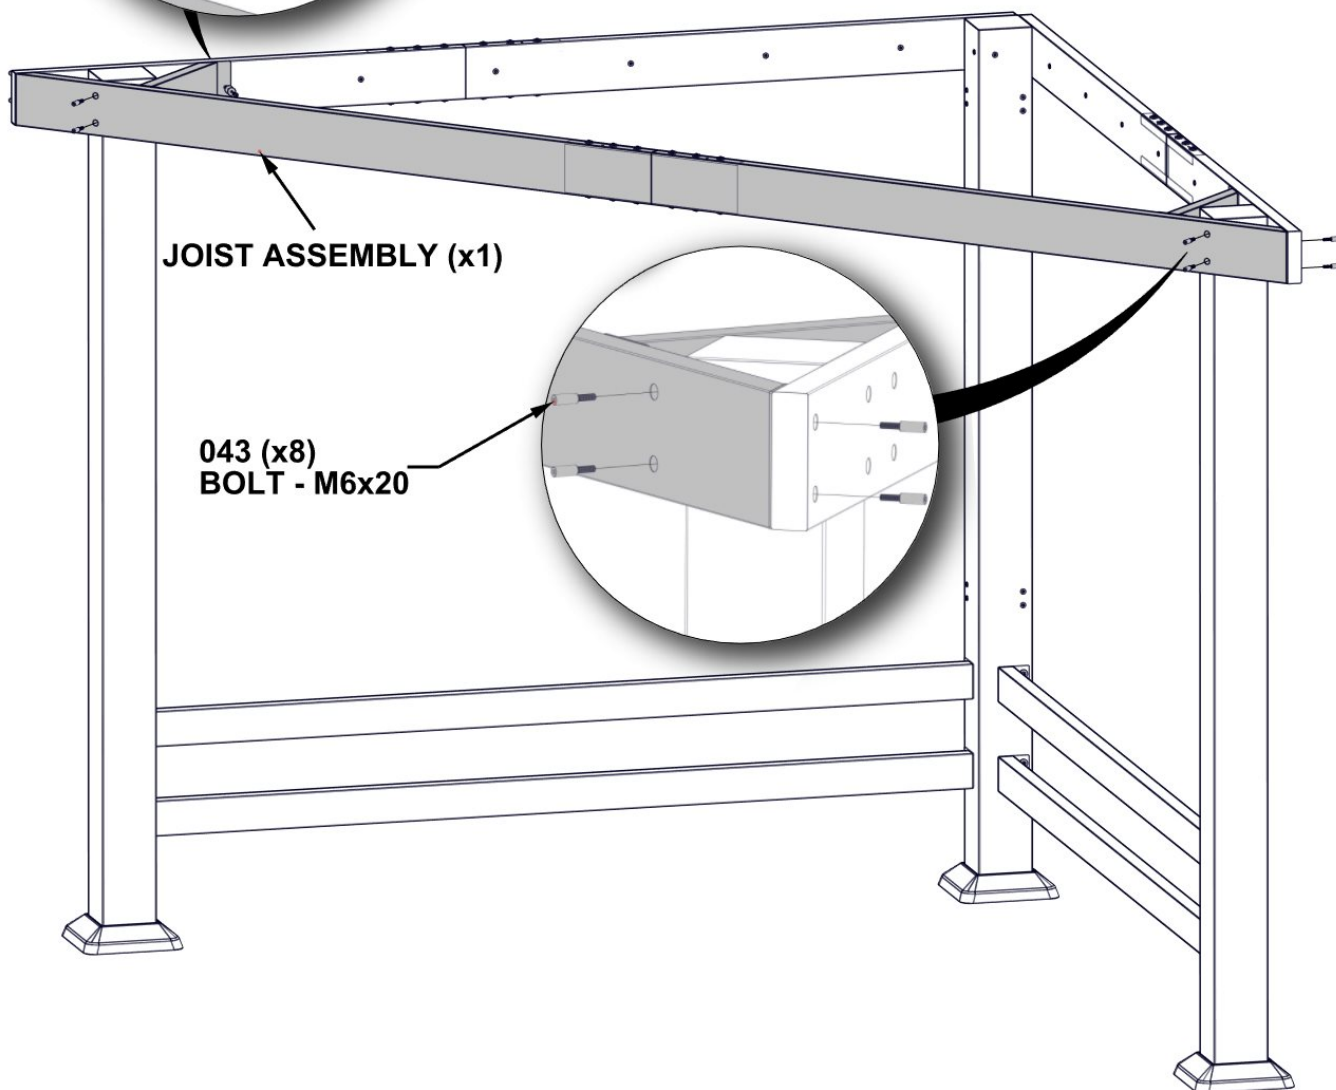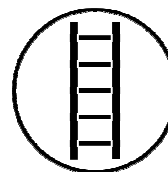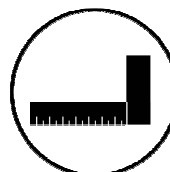



JOIST ASSEMBLY (x1)

043 (x8)
BOLT - M6x20

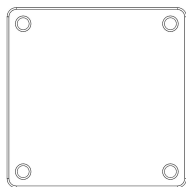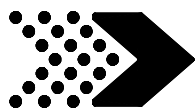

N2 | FOOT PLASTIC PLATE - A6P00472
(3) 3/8"x7 5/8"x7 5/8" (11x195x195)

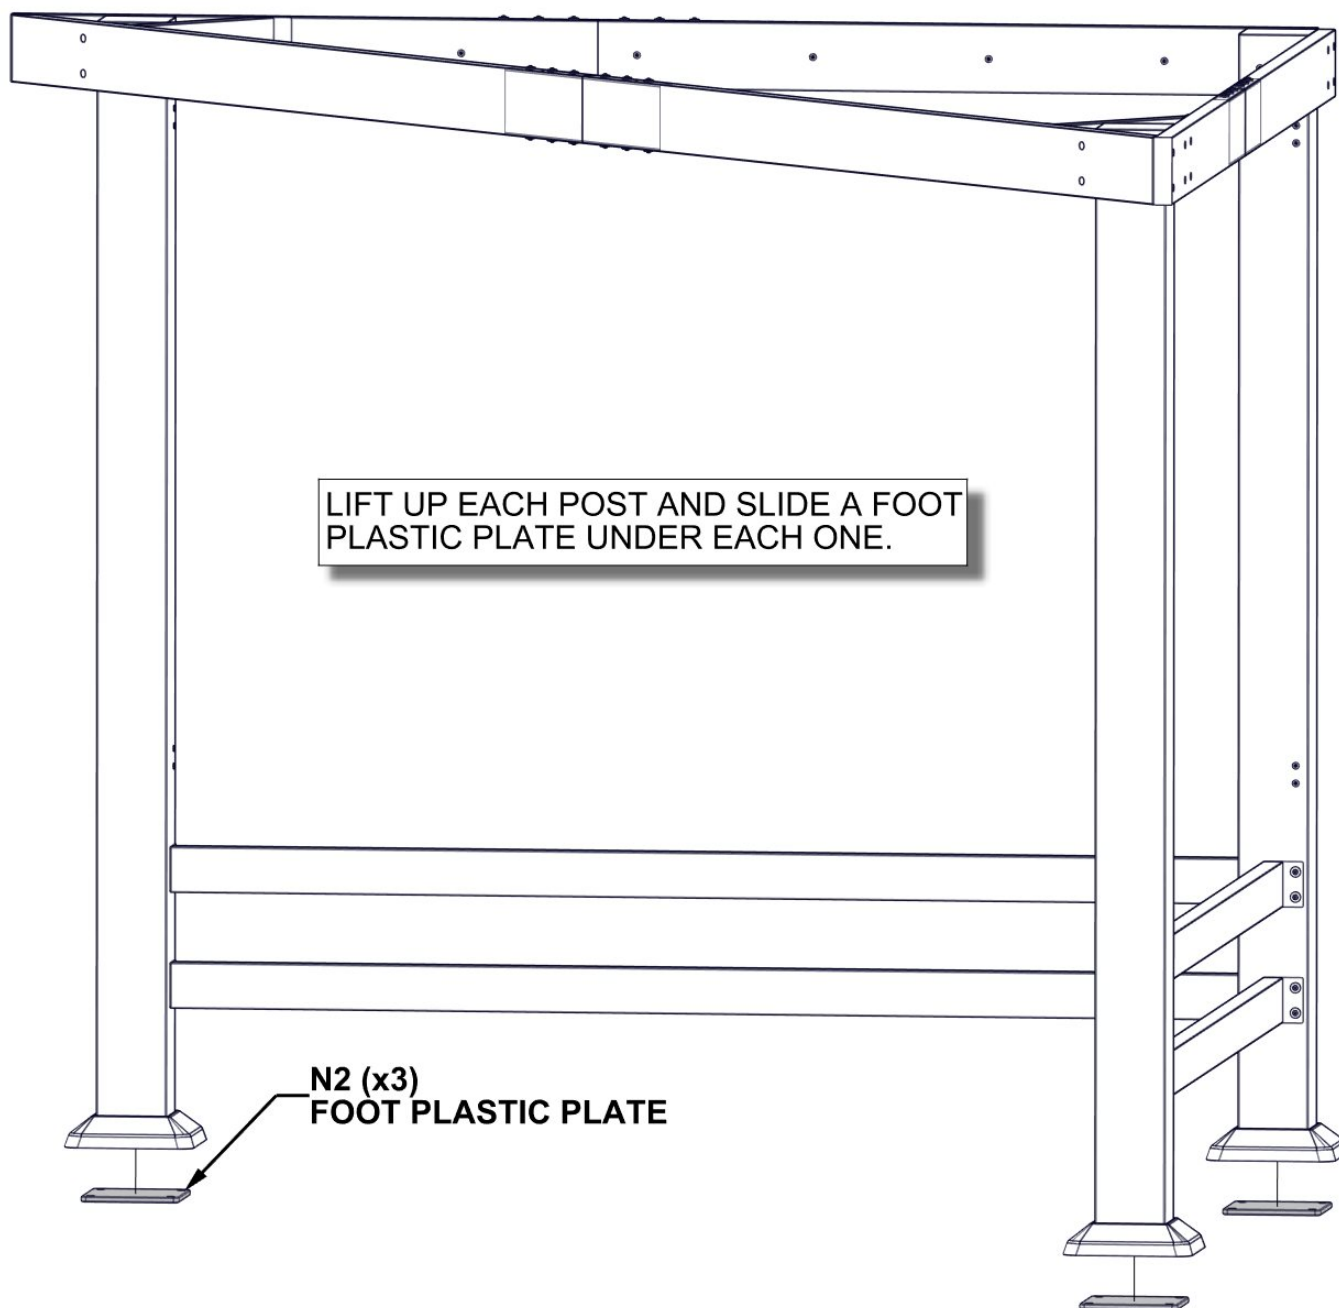

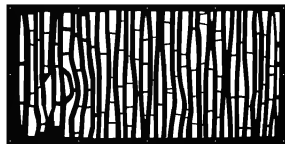

A6P00440
(6) **BLACK BAMBOO PANEL**




E2 **PANEL RAIL - A4M01323**
(8) 1 5/8"x4 3/4"x45 1/4" (40x122x1150)





E1 **PANEL RAIL - A4M01322**
(4) 3 1/8"x4 3/4"x84 1/8" (80x122x2137)

IF DIFFICULTY SLIDING PANEL RAIL ASSEMBLY INTO
PANEL RAIL OCCURS, TRY LOOSENING SCREWS SLIGHTLY.

**COMPLETE THIS
STEP TWICE.**

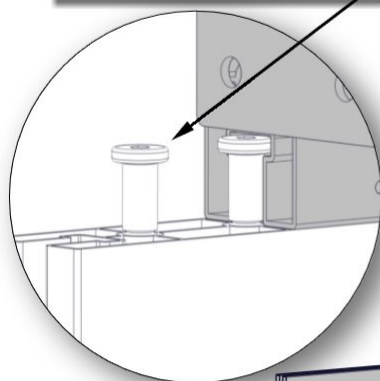

PANEL RAIL ASSEMBLIES SLIDE INTO PANEL
RAIL TOP AND BOTTOM AS SHOWN.

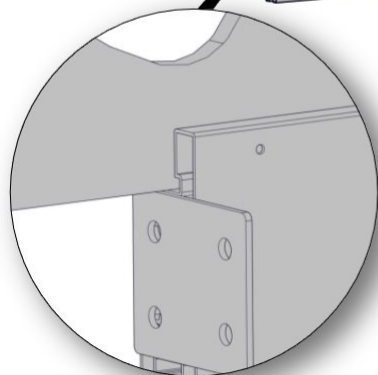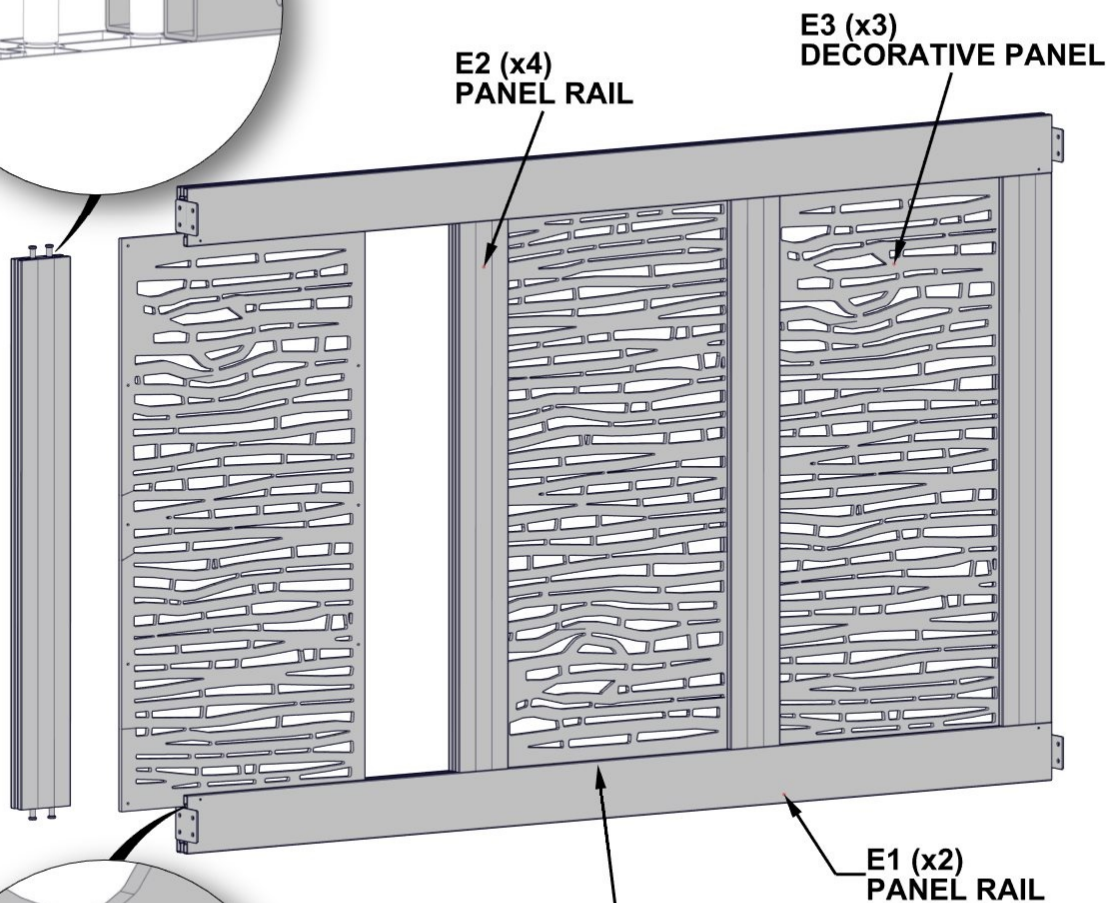


SLIDE PANEL INTO RAIL TOP AND BOTTOM
AS SHOWN. ENSURE THAT MIDDLE PANEL
IS FLIPPED OPPOSITE OF OUTSIDE TWO.




H101050 | SCREW
(8) 4.8x32

COMPLETE THIS STEP TWICE.


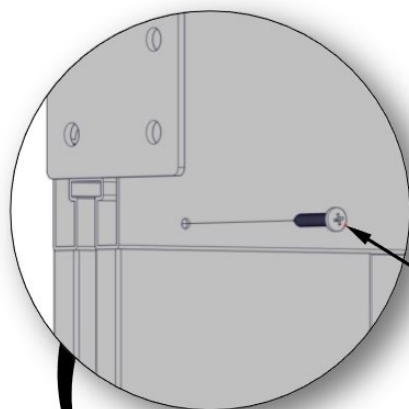


ONCE ALL PANELS AND PANEL RAIL
ASSEMBLIES ARE SLID INTO PLACE
SCREW IN SCREWS TO LOCK IN PLACE.

**050 (x4)
SCREW - 4.8x32**

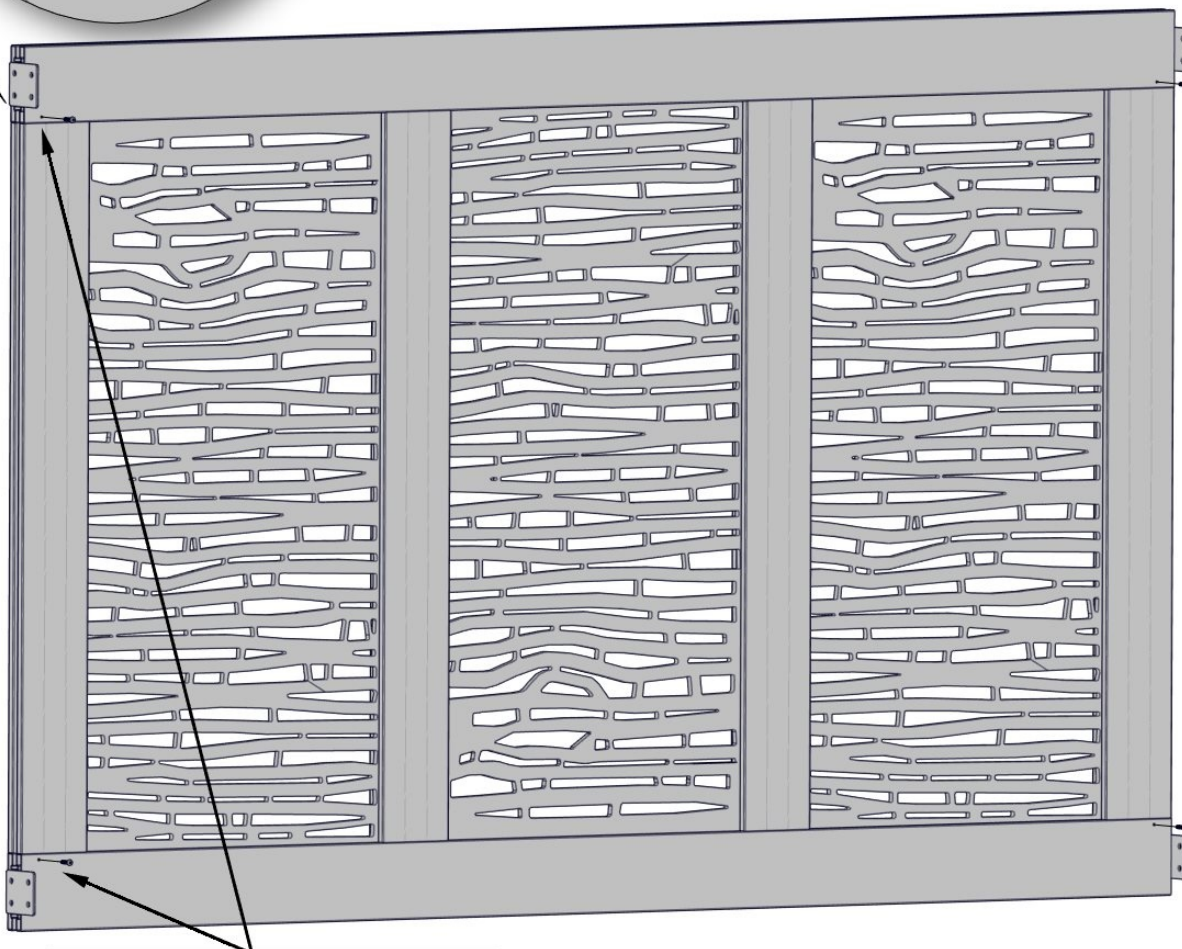

NOTE HOLE ORIENTATION.

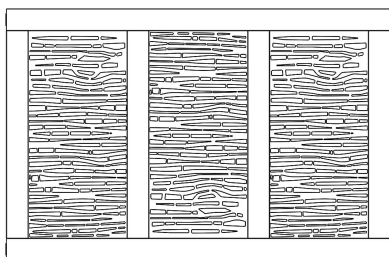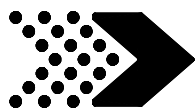

(2) **PANEL ASSEMBLY - FROM PREVIOUS STEPS**



H101040 | HEX PAN HEAD
(16) | M6x1x20


H101053 | STEEL WASHER
(16) | 6x20


H101054 | SEALANT WASHER
(16)

BOLT PANEL ASSEMBLIES INTO FRAME. ENSURE
CORRECT ORIENTATION WHEN DOING SO.

PANEL ASSEMBLY (x2)

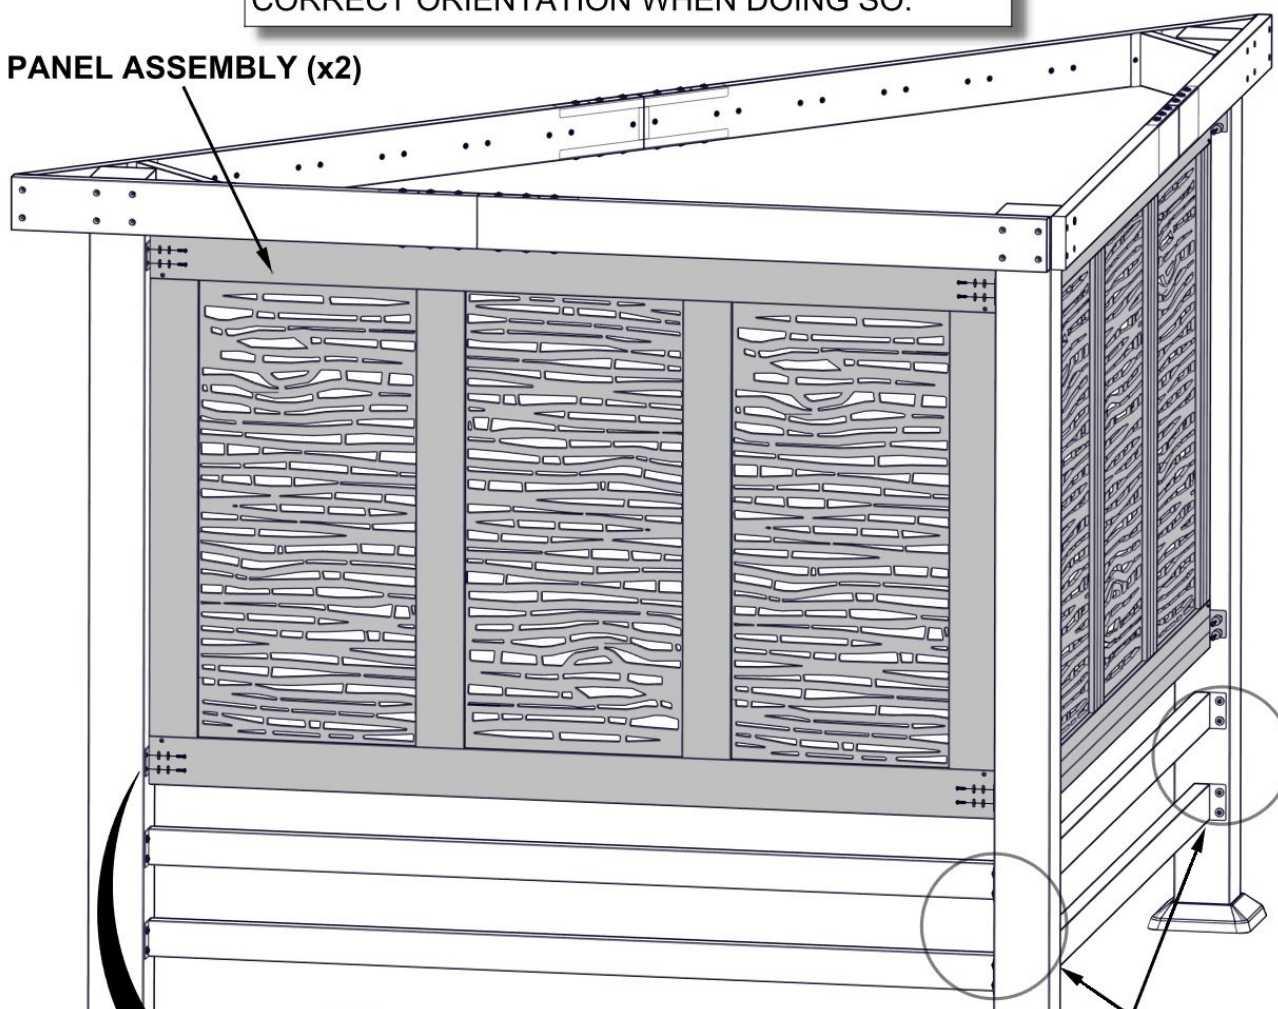

 LOOSEN THESE BOLTS PRIOR TO BOLTING IN
PANEL ASSEMBLIES. ONCE PANEL ASSEMBLIES
ARE IN PLACE FULLY TIGHTEN THEM.

040 (x16)
BOLT - M6x20

053 (x16)
STEEL WASHER - 6x20

054 (x16)
SEALANT WASHER

**D1 | JOIST - A4M01345**

(1) 3 1/2"x5 1/4"x65" (90x134x1650)

D2 | JOIST - A4M01346

(2) 3 1/2"x5 1/4"x63" (90x134x1599)

D3 | JOIST - A4M01347

(2) 3 1/2"x5 1/4"x53 1/4" (90x134x1352)

D4 | JOIST - A4M01348

(2) 3 1/2"x5 1/4"x43 1/2" (90x134x1104)

D5 | JOIST - A4M01349

(2) 3 1/2"x5 1/4"x33 3/4" (90x134x856)


D6 | JOIST - A4M01350

(2) 3 1/2"x5 1/4"x24" (90x134x608)

H101040 | HEX PAN HEAD
(34) | M6x1x20

H101053 | STEEL WASHER
(34) | 6x20


H101054 | SEALANT WASHER
(34)

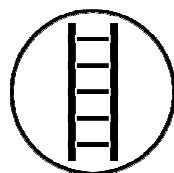



053 (x34)
STEEL WASHER - 6x20

040 (x34)
BOLT - M6x20


054 (x34)
SEALANT WASHER

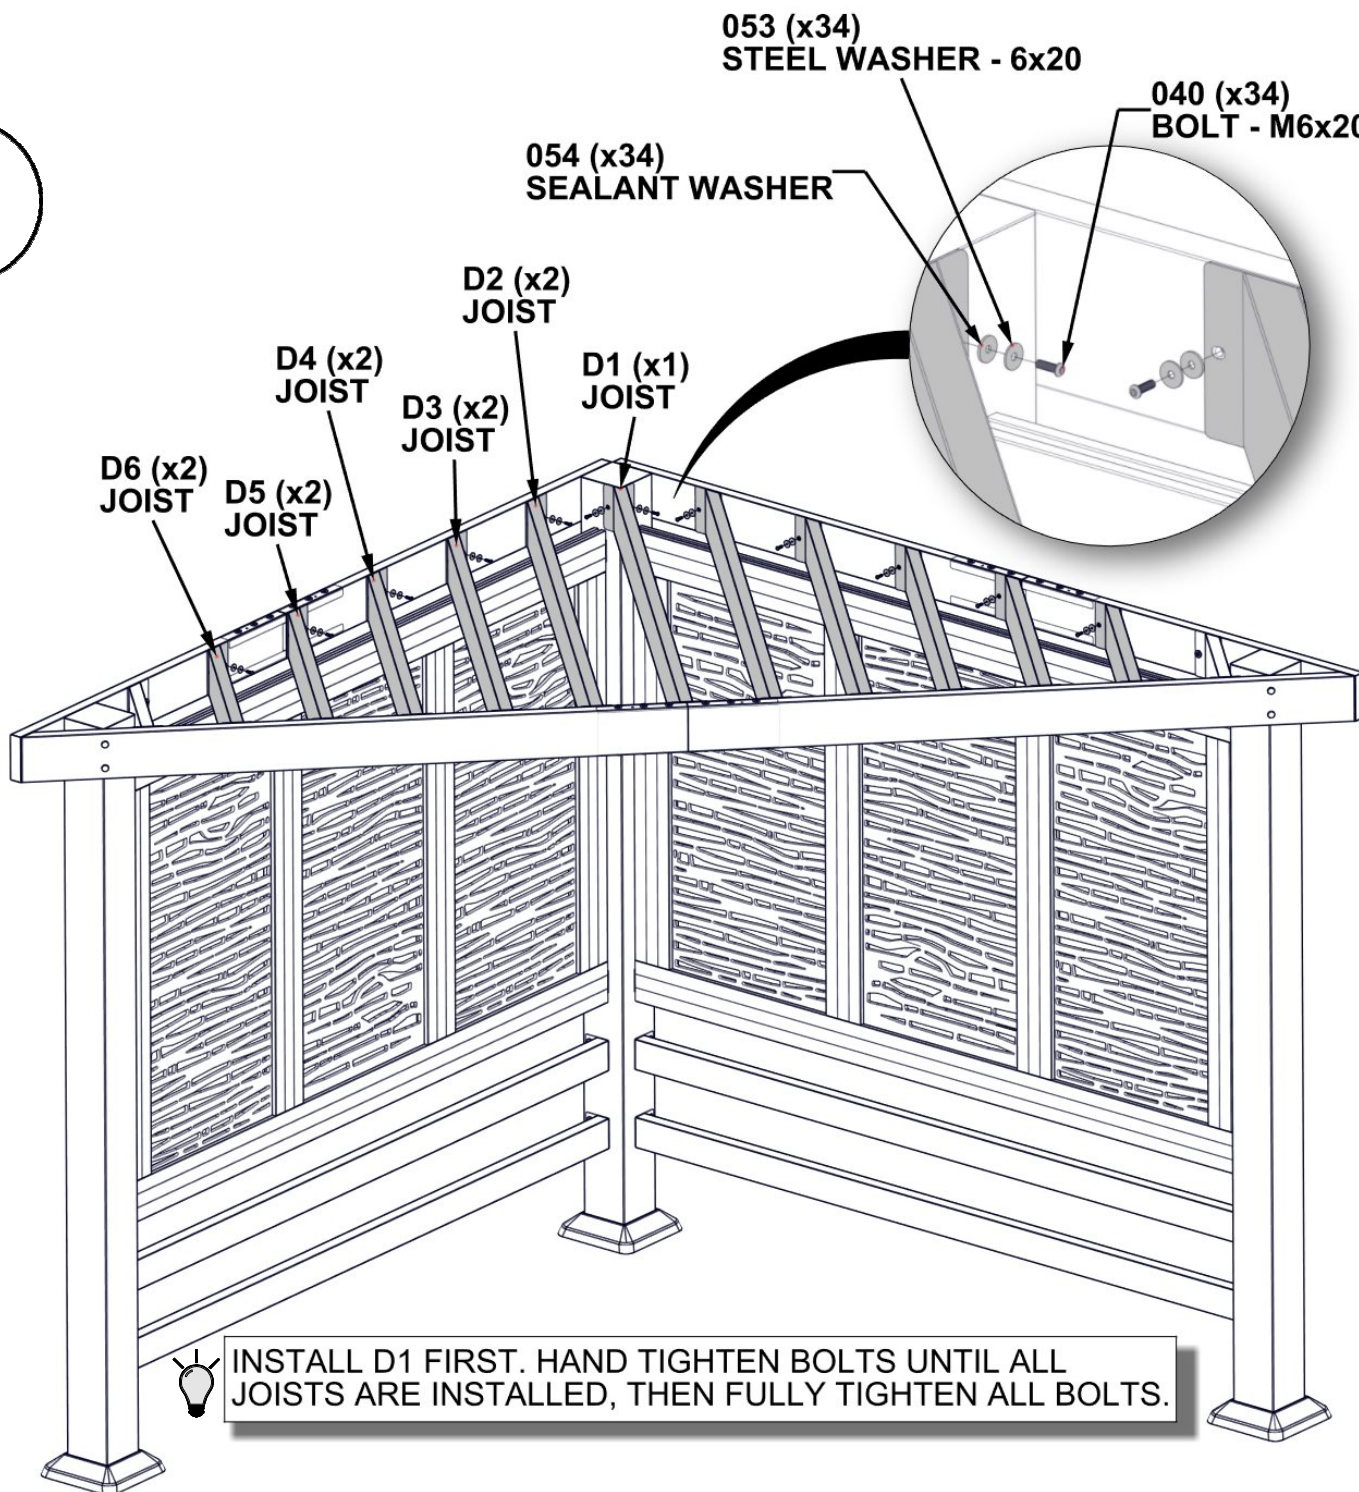


INSTALL D1 FIRST. HAND TIGHTEN BOLTS UNTIL ALL JOISTS ARE INSTALLED, THEN FULLY TIGHTEN ALL BOLTS.

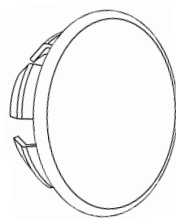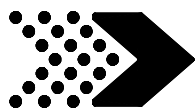


Q | HOLE COVER - A4M01352
(24)

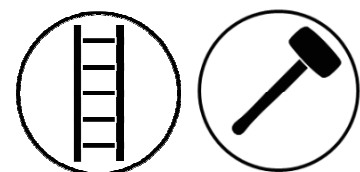


USE A SMALL PIECE OF WOOD TO TAP HOLE
COVERS IN WITH A RUBBER Mallet.

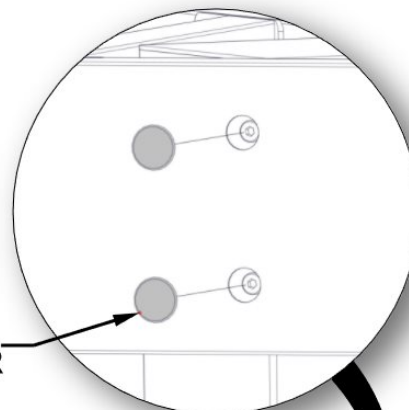


Q (x24)
HOLE COVER

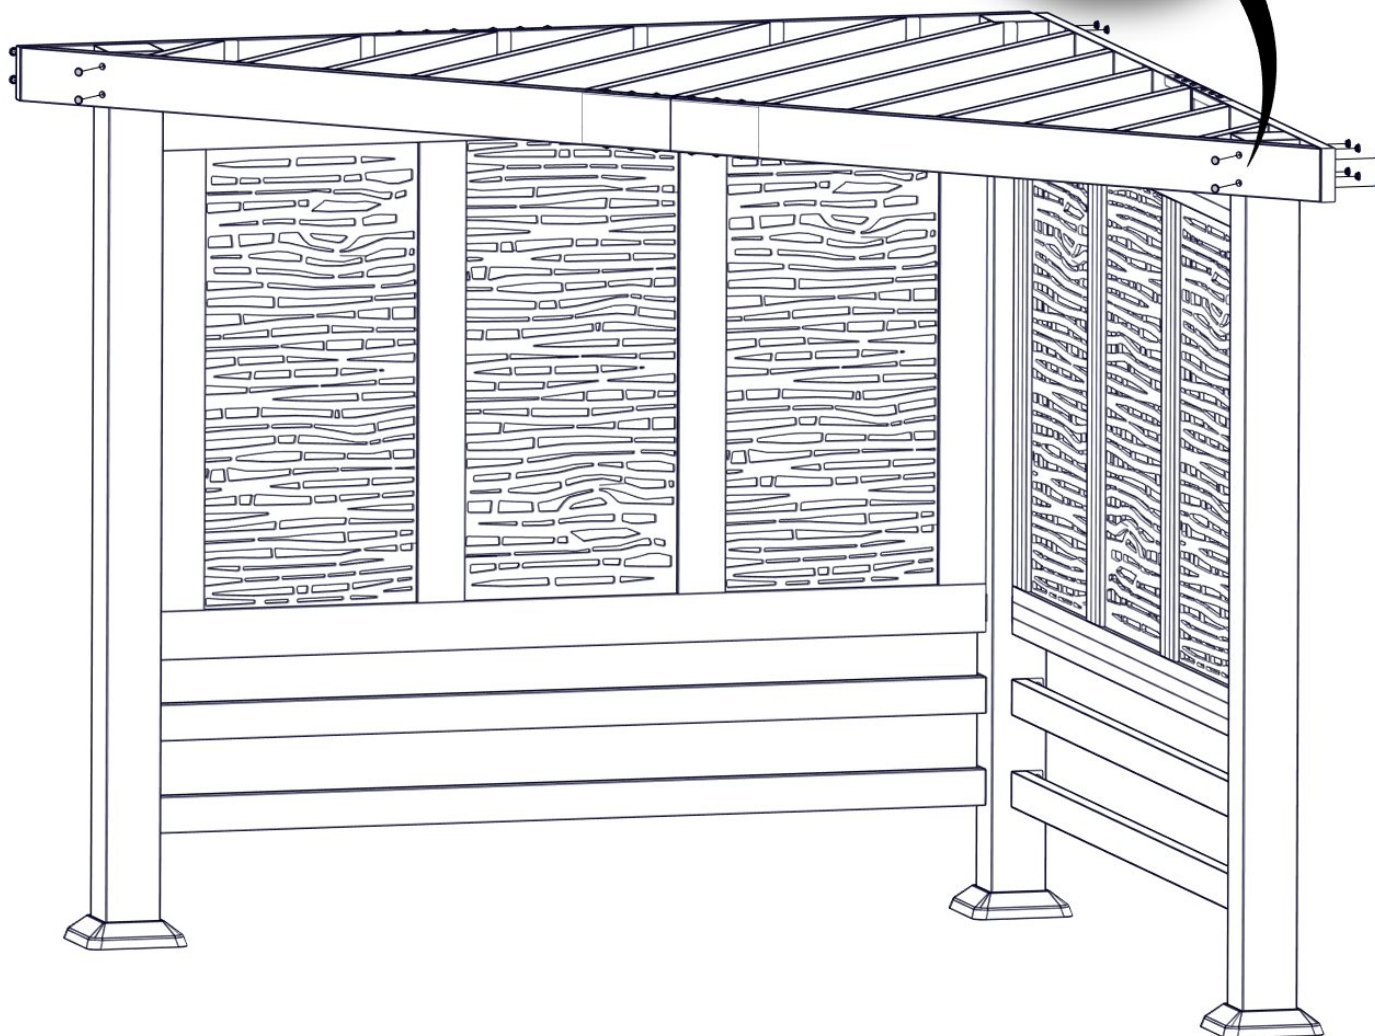




PRODUCT IS FINISHED

**FOR CUSTOMERS ASSEMBLING CABANAS WITH
FURNITURE: 2102569, 2102576, 2102583, 2102590,
2102613, 2102620, 2102637, 2102644 CONTINUE ON TO
NEXT STEP.**

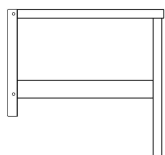

G1 | SEAT SIDE - A4M01326
(1) 3 1/2"x25 3/4"x27 3/8" (90x653x696)

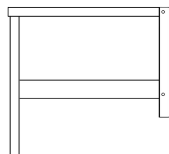

G2 | SEAT SIDE - A4M01327
(1) 3 1/2"x25 3/4"x27 3/8" (90x653x696)




H101040 | HEX PAN HEAD
(6) M6x1x20



H101053 | STEEL WASHER
(6) 6x20




H101054 | SEALANT WASHER
(6)

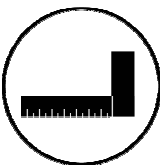

G1 (x1)
SEAT SIDE

G2 (x1)
SEAT SIDE

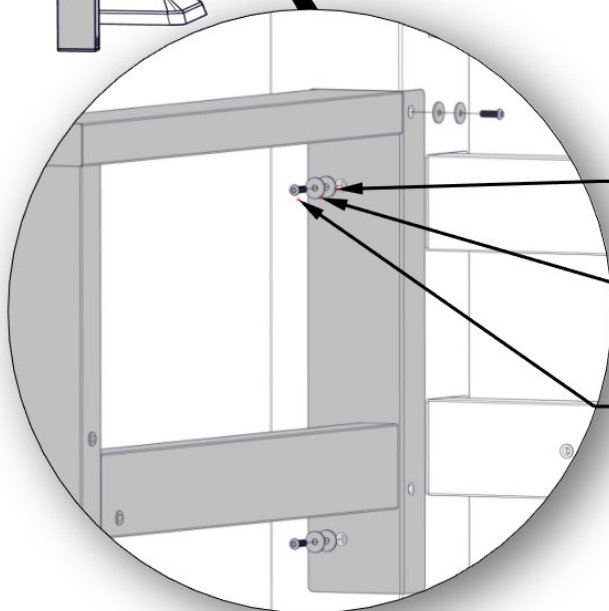

054 (x6)
SEALANT WASHER

053 (x6)
STEEL WASHER - 6x20

040 (x6)
BOLT - M6x20

SQUARE SEAT SIDES TO POSTS
BEFORE FULLY TIGHTENING BOLTS.



J1 | TABLE LEG - A4M01330
(1) 3"x3"x26 3/8" (75x75x669)

J2 | TABLE LEG - A4M01331
(1) 3"x3"x26 3/8" (75x75x669)

J3 | TABLE LEG - A4M01332
(1) 3"x3"x26 3/8" (75x75x669)

K | TABLE BRACE - A4M01333
(2) 1 5/8"x6 1/4"x22 7/8" (40x160x580)


L | TABLE TOP - A4M01334
(1) 4 3/8"x30 1/8"x30 1/8" (110x765x765)


H101040 | HEX PAN HEAD
(12) M6x1x20

H101053 | STEEL WASHER
(12) 6x20

H101054 | SEALANT WASHER
(12)

SQUARE BRACES AND LEGS TO TABLE TOP BEFORE FULLY TIGHTENING BOLTS.

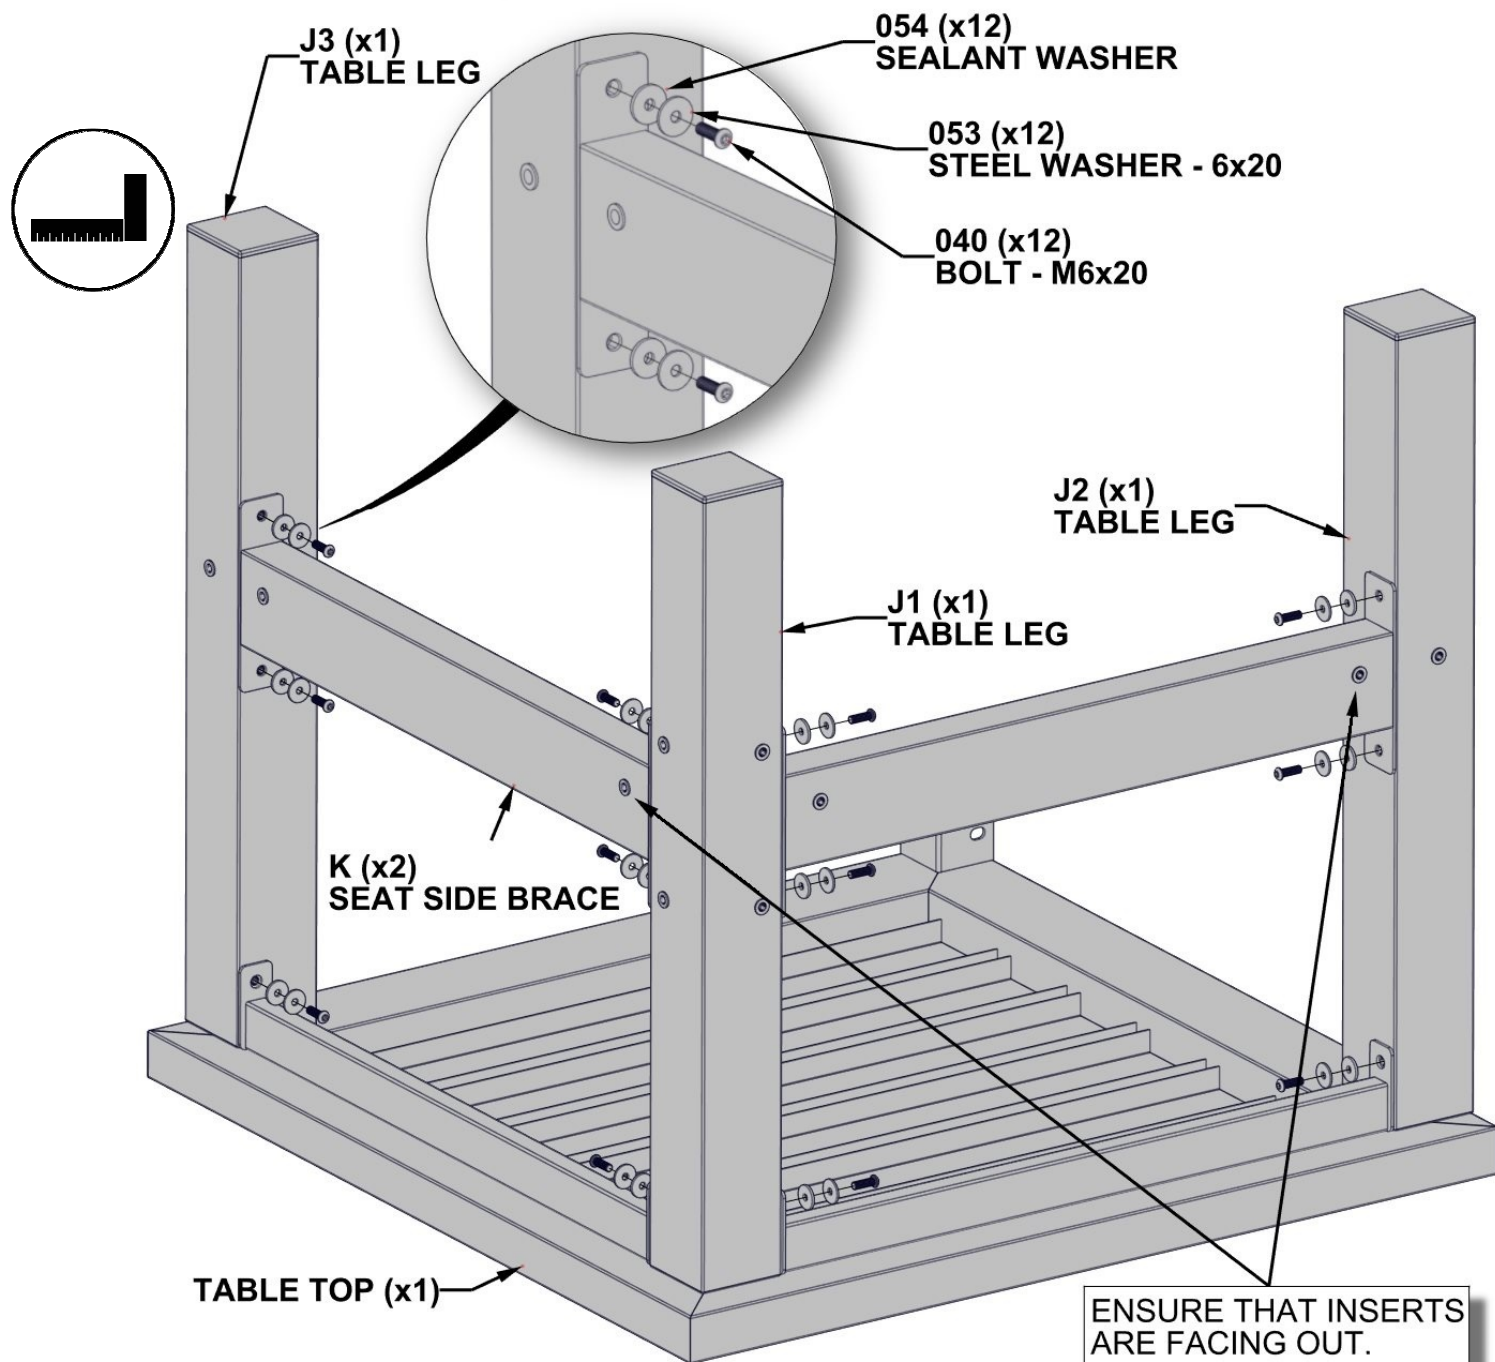

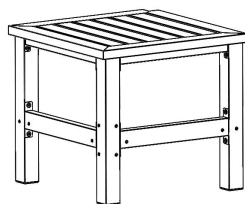

(1) TABLE ASSEMBLY - FROM PREVIOUS STEP

H101040 | HEX PAN HEAD
(2) | M6x1x20

H101053 | STEEL WASHER
(6) | 6x20

H101049 | HEX PAN HEAD
(4) | M6x1x55

H101054 | SEALANT WASHER
(6) |

ENSURE ALL LEGS OF THE TABLE ARE ON THE GROUND, AND THE TABLE TOP IS LEVEL.

049 (x4)
BOLT - M6x55



TABLE ASSEMBLY (x1)


THESE BOLTS MIGHT NEED TO BE LOOSENED TO GET THE HOLES TO LINE UP. IF THEY ARE LOOSENED, TIGHTEN THEM BACK AFTER TABLE IS ATTACHED.

040 (x2)
BOLT - M6x20

053 (x6)
STEEL WASHER - 6x20

054 (x6)
SEALANT WASHER

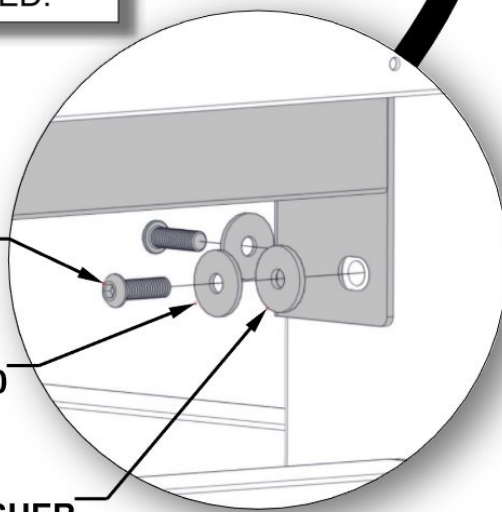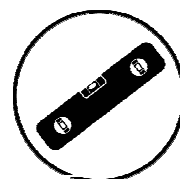



H1 SEAT FRONT BRACE - A4M01328
(2) 1 5/8"x6 1/4"x57 1/2" (40x160x1460)




H101040 HEX PAN HEAD
(8) M6x1x20




H101053 STEEL WASHER
(8) 6x20



H101054 SEALANT WASHER
(8)

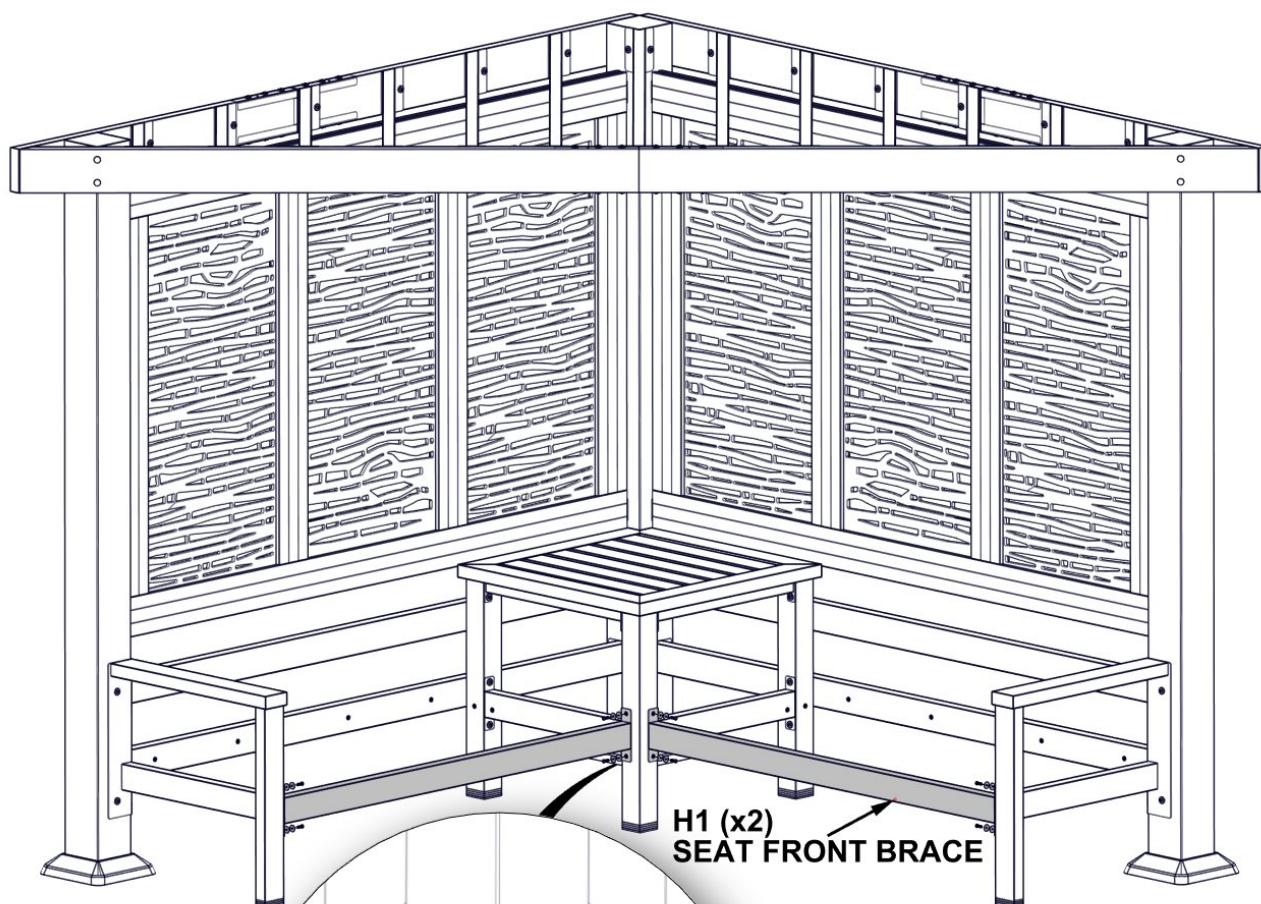

H1 (x2) SEAT FRONT BRACE

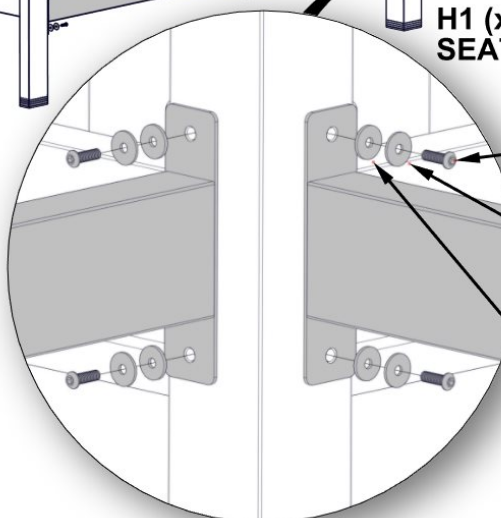

040 (x8) BOLT - M6x20

053 (x8) STEEL WASHER - 6x20

054 (x8) SEALANT WASHER

ENSURE THAT THE INSERTS ON THE BRACES ARE FACING IN.



P | SLAT BRACKET - A4M01338

(4) | 2 1/4"x2 1/2"x57 1/4" (57x65x1455)

I | SEAT SLAT - A4M01329

(24) | 3/4"x1 5/8"x25 3/8" (20x40x646)

H101040 | HEX PAN HEAD
(48) | M6x1x20

H101053 | STEEL WASHER
(48) | 6x20

H101054 | SEALANT WASHER
(48)

COMPLETE THIS STEP TWICE.






DO NOT FULLY TIGHTEN BOLTS.

**040 (x24)
BOLT - M6x20**

**053 (x24)
STEEL WASHER - 6x20**

**054 (x24)
SEALANT WASHER**

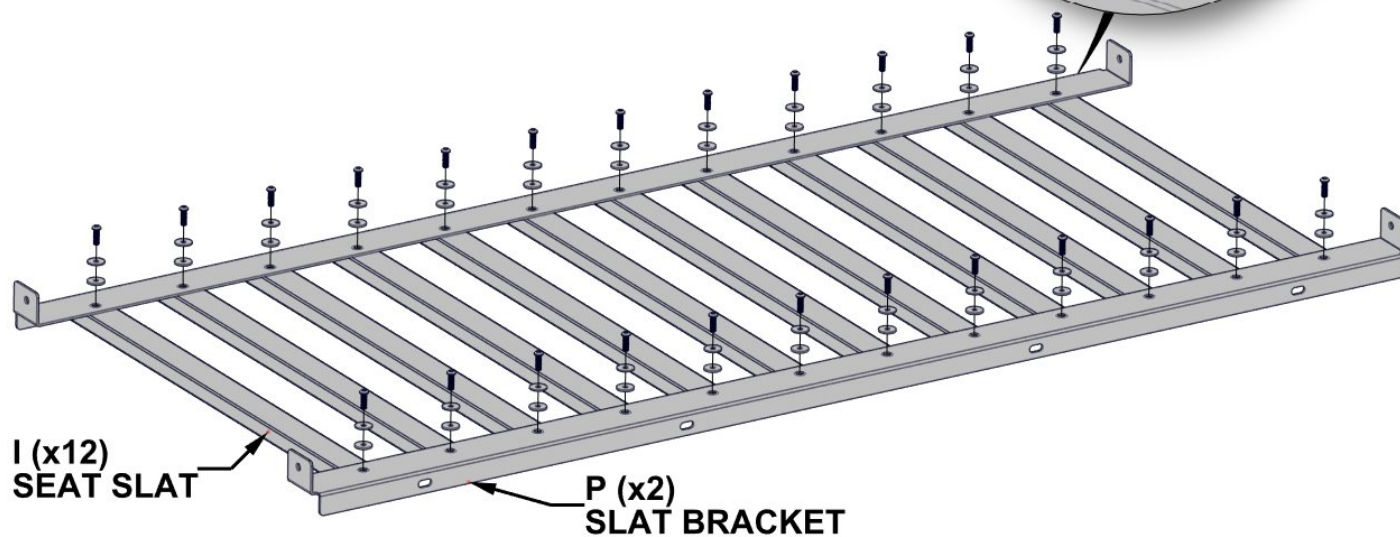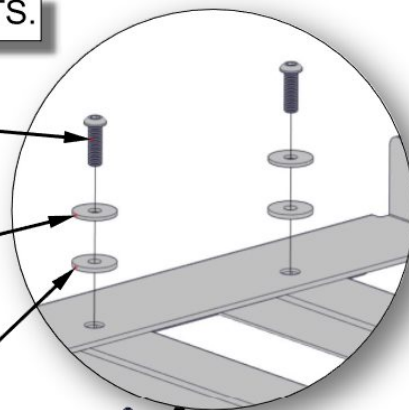

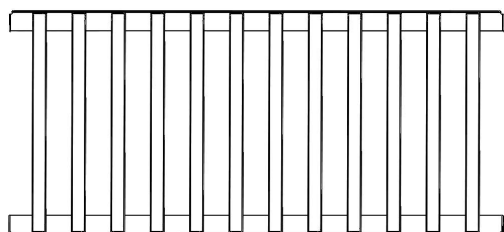

(2) **SLAT ASSEMBLY - FROM PREVIOUS STEP**




H101040 | HEX PAN HEAD
(24) **M6x1x20**



H101053 | STEEL WASHER
(24) **6x20**



H101054 | SEALANT WASHER
(24)

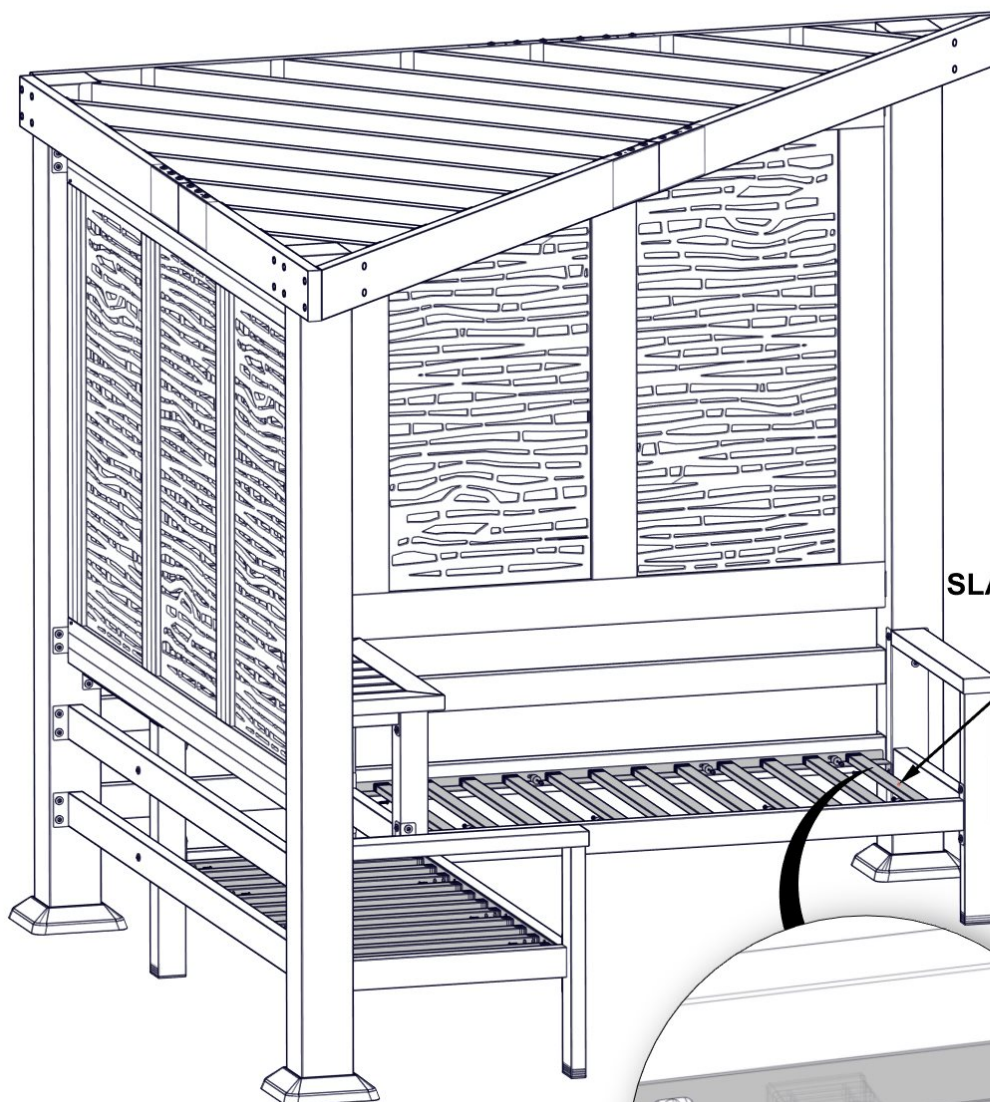


SLAT ASSEMBLY (x2)

054 (x24)
SEALANT WASHER

053 (x24)
STEEL WASHER - 6x20

040 (x24)
BOLT - M6x20

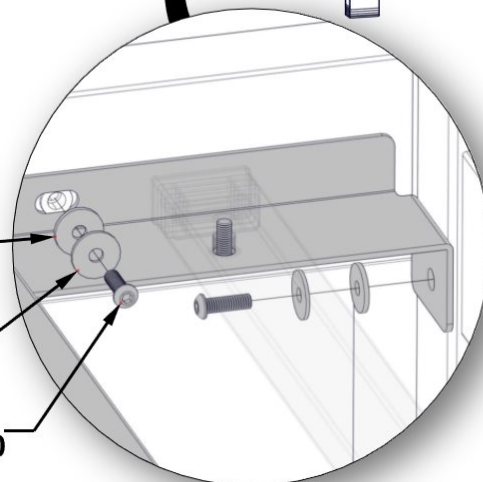

HAND TIGHTEN ALL BOLTS FIRST, THEN FULLY TIGHTEN ALL BOLTS INCLUDING BOLTS ON SLAT ASSEMBLY.

