

Crane

DESIGN
FOR
BETTER
LIVING

INSTRUCTION MANUAL

DIGITAL ULTRASONIC COOL/WARM MIST HUMIDIFIER

ITEM# EE-6902



**PLEASE READ AND SAVE ALL INSTRUCTIONS TO ENSURE THE
SAFE AND EFFECTIVE USE OF THIS APPLIANCE.**

TABLE OF CONTENTS

Table of Contents	P. 1
Safety Instructions	P. 2-3
List of Main Parts, Technical Specifications	P. 4
Humidifier Features	P. 5
Operation and Use	P. 5
Digital Control Panel Instructions	P. 6
Assembly	P. 7
Maintenance	P. 8
Trouble Shooting	P. 9
Customer Care	P. 10
Warranty	P. 11

For information about all CRANE Humidifiers,
please visit <http://www.crane-usa.com>.



IMPORTANT SAFETY INSTRUCTIONS

Thank you for purchasing a CRANE Ultrasonic Cool/Warm Mist Humidifier. Each unit has been manufactured to ensure safety and reliability. Before using for the first time, please read the instructions carefully and keep them for further reference.

WARNING! READ AND SAVE THESE INSTRUCTIONS. Failure to follow all of the instructions listed below may result in electric shock, fire and/or serious personal injury.

1. **DO NOT carry Water Tank by handle when it is filled with water. It is advisable to carry filled Water Tank with two hands.**
2. **DO NOT operate outdoors. This humidifier is intended for indoor use only.**
3. Always have water in the Water Tank when operating the unit.
4. Use only clean, cool tap water to fill the Water Tank (filtered or distilled water is recommended to avoid white dust if tap water is too hard). **DO NOT use hot water.**
5. Be sure that the Water Tank Cap is firmly tightened on Water Tank. Always have the Mist Lid in place while the unit is operating. Place the humidifier so the mist aims away from children, walls, furniture and electrical appliances.
6. Use only a 110-120VAC outlet. **ALWAYS plug and unplug unit with dry hands to avoid electric shock.**
7. Never operate the unit with a damaged cord or plug.
8. Always place the unit on a smooth, flat, lint-free, non-metallic, waterproof and level surface and position unit away from direct sunlight. Keep the cord away from heated surfaces and areas where it could be walked on or tripped over. Unplug the unit when not in use and whenever you clean or move the unit.
9. Do not add medication or essential oils into the Water Base or Water Tank. Do not cover any openings on the unit or insert objects into any openings.
10. The unit should not be left unattended in a closed room as the air could become saturated and leave condensation on walls or furniture. Leave room door partly open when humidifier is being operated.
11. When cleaning the inside of the humidifier, keep water away from the Fan Vent. **Turn off and unplug the humidifier to wipe the exterior** (except the electrical controls) with a damp cloth. Humidifier requires regular cleaning. Please refer to the CLEANING INSTRUCTIONS in this manual.
12. Do not tilt or tip the humidifier or attempt to empty or fill it while it is in operation.
13. Do not use a detergent to clean any parts of the unit that contain water. Detergent film dissolved in the water supply can interfere with the output of the unit. Instead, always use white vinegar mixed with water to clean the humidifier.

SAVE THESE INSTRUCTIONS!

GENERAL SAFETY INSTRUCTIONS



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the user that common sense and caution are a factor which cannot be built into this product, but must be supplied by the user.

Do not let your child play with this appliance. Serious injury and electrocution might be possible. This humidifier has to be operated by an adult only. Children should be supervised to ensure that they do not play with the humidifier.

SAVE ALL INSTRUCTIONS!

CAUTION: A short Power Supply Cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the extension cord must be (1) marked with an electrical rating of 125 V and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

ELECTRIC POWER

If the electric circuit is overloaded by other appliances, your humidifier and/or appliances may not operate properly. The humidifier should be operated on a separate electrical circuit from other operating appliances.

POLARIZED PLUG

This humidifier has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



SAFETY WARNING


Although your humidifier is easy to operate, for your safety, the below warnings must be followed:

1. Do not place the humidifier near a heat source.
2. Never leave the humidifier unattended while connected to the electrical outlet.
3. To avoid any accidents, never cover the Mist Lid when the humidifier is in operation.
4. Use the humidifier on a smooth, flat, lint-free, non-metallic, waterproof, and level surface away from water.
5. Do not unplug from the wall socket by pulling on the supply cord.
6. The humidifier must be unplugged:
 - A. Before either filling or emptying the Water Base and/or Water Tank.
 - B. Before any cleaning or maintenance is performed.
 - C. After each use.
 - D. If it appears to be faulty.

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

LIST OF MAIN PARTS

1. Adjustable Mist Output Slot
2. Mist Lid
3. Digital Control Panel
4. Water Tank Handle
5. Water Tank
6. Water Tank Cap
7. Water Base
8. Fan Vent
9. Nebulizer
10. Water Level Sensor/Float

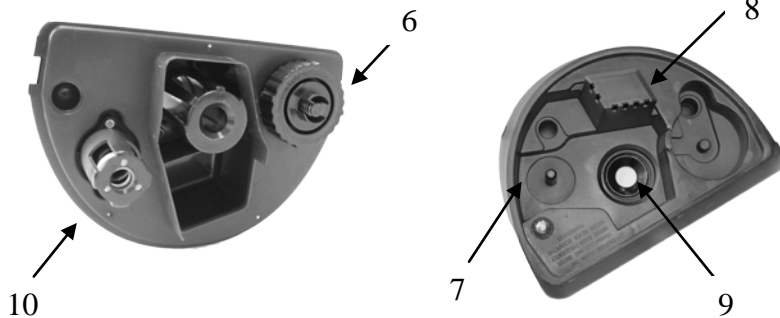

TECHNICAL SPECIFICATIONS:

Rating Voltage	120V
Frequency	60Hz
Power Cool Mist	30W
Power Warm Mist	110W
Water Tank Capacity	1.3 Gallon
Run Time Per Tank	Up to 24 hours
Humidifying Capacity	Up to 500 sq.ft. / 46 m ²

HUMIDIFIER FEATURES

CRANE'S CLEAN CONTROL

Anti-microbial Material: Proven to help reduce mold and bacteria growth up to 99.96% in the humidifier base*

*EMSL Test Report 151305654. Reduction of mold and bacteria is based on independent laboratory testing. EMSL report 151305654 results are based on the reduction of the bacteria in the humidifier base with Clean Control material, during continuous use. The humidifier base showed a reduction rate up to 99.96% of Gram Negative – Pseudomonas Aeruginosa after 8 hours.

WARM AND COOL MIST

You can select a warm mist or cool mist with this humidifier.

Humidifiers add moisture to the air, which helps ease coughing and congestion due to a cold, and relief from dry skin, chapped lips, and dry eyes. Warm mist and cool mist humidifiers are equally effective in humidifying the air.

- Warm Mist heats the water emitting a warm mist.
- Cool Mist emits a cool mist and will not drastically affect room temperature.

ULTRASONIC HUMIDIFIER

This is an Ultrasonic humidifier. The humidifier uses a metal diaphragm vibrating at an ultrasonic frequency, much like the element in a high-frequency stereo speaker to create mist. An ultrasonic humidifier is whisper quiet and produces a fine mist into the room.

REMOTE CONTROL

This Digital Humidifier includes a Remote Control that can be used to operate your device. Simply pull the small plastic tab before use to activate.

OPERATION AND USE

BEFORE EACH USE

CHECK HUMIDIFIER PLACEMENT

Place the Humidifier on an elevated, non-metallic, lint-free, waterproof, level surface at least 2 feet above the floor.

- **DO NOT** place the humidifier on carpet or a towel. The fan vent is located on the bottom of the humidifier base. The fan vent **MUST NOT** be obstructed.
- **DO NOT** place the humidifier on a wood surface or near furniture that can be damaged by too much moisture.

CHECK WATER LEVEL SENSOR

Make sure that the Water Level Sensor is secured properly and not obstructed. See page 10 for more troubleshooting.

DO NOT operate the humidifier without water in the Water Tank.

DO NOT plug or unplug the Power Cord with wet hands as electric shock could occur.

DO NOT USE ANY ADDITIVES IN THE WATER

Additives – such as oils, fragrances, or vapor/steam medications – cannot be added to the water. This humidifier is not made to take additives. Any use of additives will void the manufacturer's warranty.

DIGITAL CONTROL PANEL INSTRUCTIONS

NOTE: Use on/off button to reset the humidifier.



ON/OFF- Switch humidifier on/off by pressing this button.



TIMER – The lower bar of numbers on the digital display are for the timer. You can set the timer for 1- 12 hours. There are 4 numbers on the digital screen (1,2,4,5). Press timer button to select desired hours of operation.



ION – Press this button to enrich mist with negative ions to freshen the room air.



MAX-MIN MIST CONTROL- Press this button to change the mist output to Low, Medium, or High



SET HUMIDITY LEVEL – Press this button to set desired humidity level. You can set the humidity level between 40% - 80%. The recommended humidity level is between 40% - 60%.



COOL/WARM MIST SELECTOR- When humidifier is on, cool mist will automatically start. To select warm mist, press this button and the warm mist setting will activate within 15 minutes.

AUTO SHUT OFF –When the water level gets low, the humidifier will automatically shut off. A red light in the lower right side of digital display will flash indicating the water level is low and the humidifier mist has turned off.

ASSEMBLY

ALWAYS use fresh cool water when operating the humidifier.

1. Turn Water Tank upside down and unscrew Water Tank Cap.
2. Fill Water Tank with cool water. **DO NOT** fill water all the way to the rim.

**DO NOT CARRY FULL WATER TANK BY HANDLE.
ALWAYS HOLD FULL WATER TANK WITH TWO HANDS.**

DO NOT use hot water. Use cool tap water.
DO NOT add any medication, essential oils, or salt.
DO NOT pour water into Mist Outlet Channel.

3. Screw Water Tank Cap back onto Water Tank. Turn the Water Tank over and place on Water Base, making sure it fits perfectly.

Note: Do not attempt to move the humidifier while Water Tank is placed on Water Base. Doing so may cause leakage of water and/or Water Base to overflow.

4. Plug the power cord into a wall socket and turn on the unit by using the Control Knob.
5. Use the Digital Control Panel to select the mode of your choice. The blue Power Indicator Light will illuminate. In a few seconds, mist will start emitting.
6. Use the Digital Control Panel to adjust the intensity of the mist output.

SET THE CORRECT HUMIDITY OUTPUT: Adjust the Digital Control Panel so that the mist rises up to be absorbed by the room air. Do not set the mist output too high, as the mist cannot be absorbed by the air and may accumulate on the surfaces around the humidifier.

7. When the humidifier runs out of water, the humidifier will automatically shut off and the mist will stop. The Low Water Indicator Light will illuminate red. This safety feature uses a water level sensor to stop the Nebulizer once the water level sinks below the required level in the Humidifier Base.

Note: The indicator light on the humidifier will remain on. The red light indicates that the humidifier is turned on and needs to be refilled.

A NOTE ABOUT HUMIDITY

- It is best to keep the humidity level at about 40%-50% of relative humidity.
- In cold weather, windows and even some walls may fog or develop frost from excessive indoor humidity. If this occurs, reduce the mist output setting to avoid damage from condensed water dripping onto windowsills.
- Too much humidity in the room may allow moisture to accumulate on surfaces where bacteria and fungi can grow. Moisture that gathers may also damage furniture and walls, especially wallpaper.
- To reduce excessive humidity, especially in small rooms, leave the room door open and adjust the mist intensity control setting.

MAINTENANCE

Cleaning and disinfecting on a regular basis is important for maintaining the performance of your humidifier.

IMPORTANT:

Water left in Tank or Base when unit is not in use may result in buildup of mineral deposits and bacteria.

When emptying base make sure NOT to pour towards the air vent.

DAILY MAINTENANCE

1. Turn off, unplug from outlet, and empty water from tank & base daily.
2. Allow tank & base to air dry.
3. Leave cap off the tank until ready for next use.

WEEKLY MAINTENANCE

1. Turn off, unplug from outlet, and empty water from tank & base.
2. Fill the water tank halfway with warm water. Add 2 Tablespoons of white vinegar. Shake vigorously and let sit for 30 min. Empty tank & rinse with plain water.
****TIP: Use crushed ice or wire brush to help scrub the inside of the tank**
3. Rinse warm water through the mist outlet channel.
4. Fill base with water, add 1 tablespoon of white vinegar & let sit for 30 min. Empty base & rinse with plain water.
****TIP: Clean the nebulizer with a damp cloth or cotton swab after soaking**
5. Remove the permanent humidifier filter attached to the cap and let soak in the same solution for 10-15 minutes, shaking occasionally before rinsing with water.
6. Allow tank & base to air dry.
7. Leave cap off the tank until ready for next use.

NEVER IMMERSE HUMIDIFIER BASE IN WATER.

END-OF-SEASON MAINTENANCE & STORING YOUR HUMIDIFIER

1. Turn off, unplug from outlet, and empty water from tank & base.
2. Follow instructions for weekly maintenance above.
3. Let all parts dry completely.
4. Store humidifier in a cool, dry place.

TROUBLE SHOOTING

DO NOT attempt to repair the motor or nebulizer yourself. If the humidifier continues to not operate please contact Crane Customer Care: 888-599-0992 or customer-service@crane-usa.com.

Problem	Solution
<i>If humidifier does not have any power:</i>	<ul style="list-style-type: none"> ▪ Ensure unit is properly plugged into a power outlet. ▪ Check that the Control Knob is turned to the ON position. ▪ If Power On indicator light does not come on, contact Crane Customer Care.
<i>If there is a strange odor:</i>	<ul style="list-style-type: none"> ▪ Clean the Water Tank with the water and vinegar solution and rinse with clean water. ▪ Leave the empty Water Tank open for 12 Hours (without the Water Tank Cap attached) in a cool place.
<i>The digital display is on, but there is no mist:</i>	<ul style="list-style-type: none"> ▪ Unplug and re-plug into power source. ▪ Check that there is water in the tank. ▪ Check for possible mineral deposits on the nebulizer. ▪ Make sure that nothing blocks the mist output slot. ▪ Check that the fan vent on bottom of humidifier is not blocked. ▪ Empty the humidifier and rinse the water base with cool tap water and allow to dry for 30 minutes. ▪ If this does not solve the problem, please contact Crane Customer Care.
<i>White dust appears and settles outside the humidifier:</i>	<ul style="list-style-type: none"> ▪ Area tap water may have too many minerals. Clean your humidifier filter or change to filtered or distilled water.
<i>If tank is filled but red light remains on:</i>	<ul style="list-style-type: none"> ▪ Dump water from tank and base, then check to make sure water level sensor is clean and attached properly. See cleaning instructions on page 8 if needed.

CUSTOMER CARE

If you have any questions with regard to the operation of this humidifier or are in need of a spare part, please contact Crane Customer Care.

Crane USA, Inc.
1015 Hawthorne Dr
Itasca, Illinois 60143

Toll Free: 1-888-599-0992 (Monday - Friday 9:00am - 4:00pm CST)
Email: customer-service@crane-usa.com

Website: www.crane-usa.com

NOTE: Spare Parts can also be purchased online at www.crane-usa.com.

ENVIRONMENTAL PROTECTION



If the humidifier should no longer operate, please be sure to dispose of the unit in an environmentally friendly way by taking it into a public collection point. Please do not place broken humidifiers with your regular household waste. In the event of a malfunction, please save any functioning parts for use as spare parts.

THANK YOU FOR HELPING US REDUCE HOUSEHOLD WASTE

LIMITED WARRANTY

Thank you for purchasing a **Crane** product. This Ultrasonic Humidifier was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects under normal use and conditions for 1 year.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE. CALL US FOR PROBLEMS AND QUESTIONS. WE CAN HELP.

If you experience unsatisfactory operation, first refer to the troubleshooting section in the manual to ensure that it is not due to care or cleaning. Follow Care and Cleaning Instructions from manual. You can also visit www.crane-usa.com Customer Care for information.

If you have any questions or comments, please call Crane Customer Care, Toll Free: 888-599-0992 or Email customer-service@crane-usa.com. Please specify the style and model number so our Customer Care Department can assist you.

WARRANTY REQUIRES A DATED PROOF OF PURCHASE.

This warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons, or a failure to follow operating instructions provided with the product. This warranty does not apply to normal wear and tear or commercial use.

The warranty is non-transferable and applies only to the original purchaser and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair or replacement. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss - direct, indirect or incidental – or consequential damage arising out of, or in connection with the use of this product.

This warranty is valid only in the 48 contiguous states plus the District of Columbia and excludes Puerto Rico and the Virgin Islands. This warranty is effective only if the product is purchased and operated in the United States of America.

This warranty gives you specific legal rights; however you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages; therefore these restrictions may not apply to you.

Any instructions or warranty included in this manual may be subject to change without notice. For the most up-to-date instructions and warranty information, please contact us or visit our website.

To receive warranty instructions and return authorization, please call or email Crane Customer Care.

Crane USA, Inc.

1015 Hawthorne Dr, Itasca, IL 60143

Toll Free: 1-888-599-0992 (Monday - Friday 9:00am - 4:00pm CST)

Email: customer-service@crane-usa.com

Website: www.crane-usa.com

CRANE WARRANTY